


DWG. No. : KP-DFD-078
SHEET No. : 1 of 1

ALL DIMENSIONS ARE IN mm

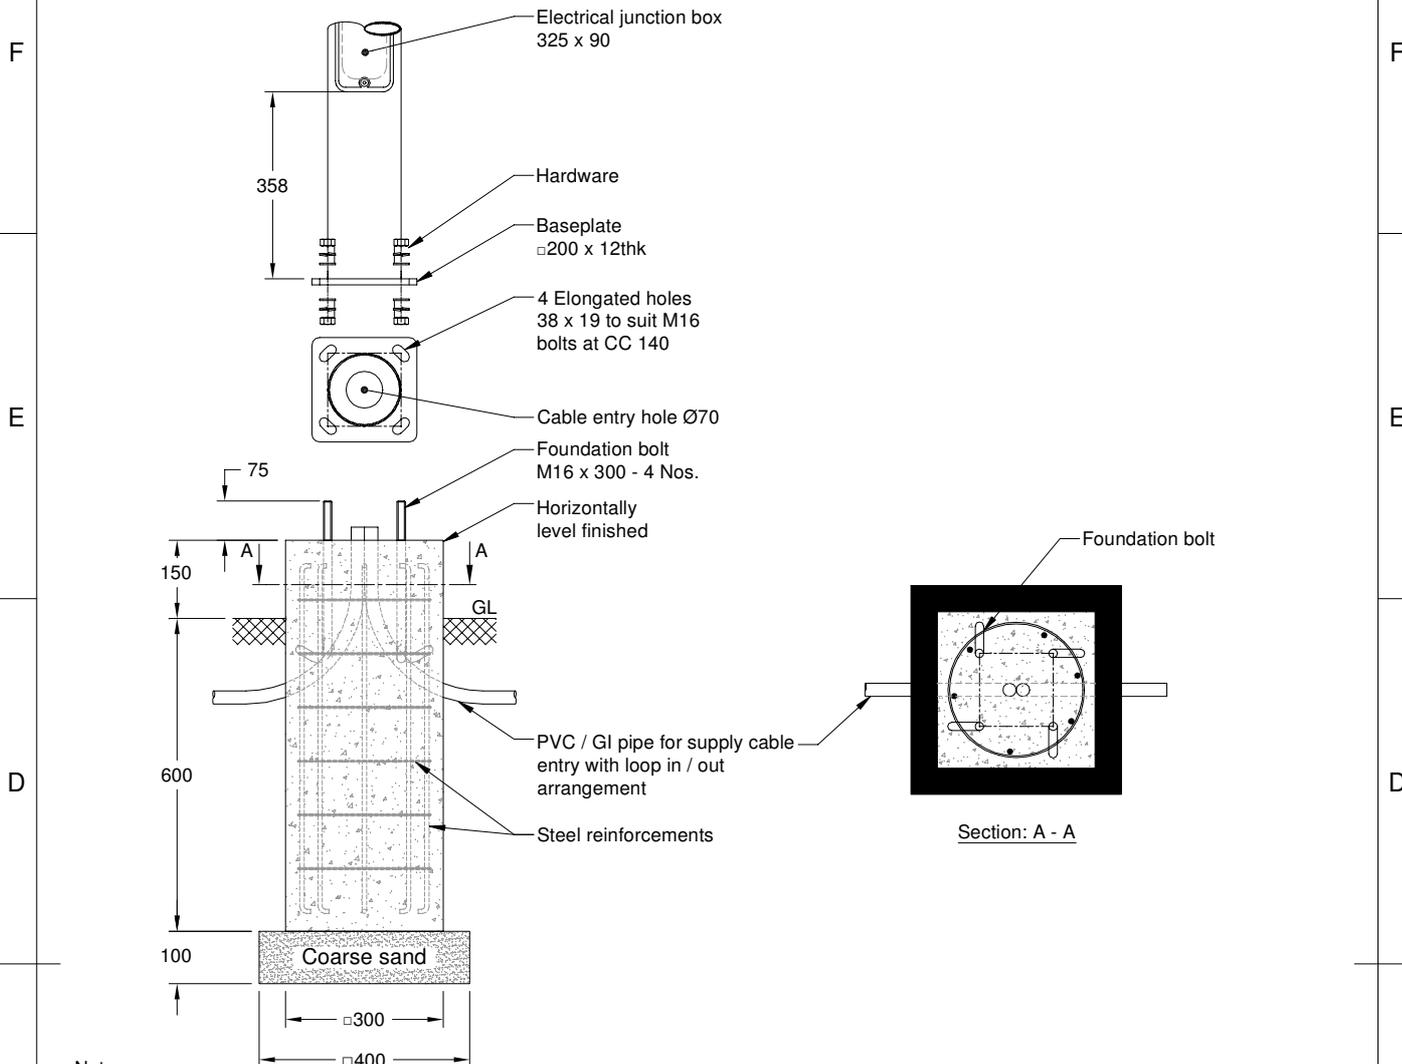

Note :

1. Typical foundation drawing suitable for standard soil condition.
2. Parameters considered in RCC foundation design :
 - Load bearing capacity of soil (LBC) : 10 Mt/m² (Minimum)
 - Basic wind speed : 50 m/s
 - Grade of steel reinforcement : Fe 415
 - Grade of foundation bolt : 4.6
3. Height of foundation above ground level (150mm) may be revised to suit the site conditions especially considering the expected water level stagnation.
4. Template supplied is suggested to be used for locating the CC of foundation bolts.
5. 4 Nos. of foundation bolt have to be oriented (located), while casting the foundation such that the door of the electrical junction box faces the required direction.
6. PVC / GI pipe for entry of supply cable and the materials required for foundation are not scope of our supply.

04.	CABLE ENTRY HOLE REVISED	03-02-18	BASKAR		
03.	DESIGN REVISED	24-01-17	SATHISH		
02.	ELECTRICAL JUNCTION BOX DOOR AND SPEC DETAILS REVISED	29-02-16	SATHISH		
01.	ELECTRICAL JUNCTION BOX HEIGHT REVISED	16-12-15	SATHISH		
REV. No.	REVISION DETAILS	DATE	REVISED	CHD	APPD

DRAWN THIRUPATHI	CHECKED	APPROVED	DATE 25-03-15	SCALE 1:15	MATERIAL	K:\CADD SERVER\KP\005.FOUNDATION DETAILS\KP - DFD - 078 (KP-37)\REV 04.DWG				
<p>K-LITE INDUSTRIES CHENNAI-600 058</p>						DETAILED FOUNDATION DRAWING FOR KP - 37 □200 x 12 (FOUNDATION BOLT M16 x 300)				
						DRG. NO. KP-DFD-078		REV 04	SHEET 1 of 1	