K-LiTE

Sudo - Open Frame

Sudo represents a perfect combination of sleek and aesthetic fixtures designed to provide uniform illumination for low mounting heights where guidance and security lighting is required. Sustainable LED technology offers durability and optimal light output with low power consumption.

Product Description

- Luminaire made of pressure die cast aluminium alloy of high corrosion resistance and non corrosive A2 stainless steel fasteners.
- Non yellowing UV stabilized translucent acrylic diffuser.
- · Silicone gasket.
- ABS plastic installation housing for preparing the recess opening in wall / stairs for flush mounting.
- · Cable entries for through-wiring of mains supply cable.
- Integral constant current power supply
- CRI (Ra): ≥80 (>90 On Request)
- Prewired with LED driver and suitable for operating on 240V, 50Hz single phase ac supply.
- · Ordering guide: KL-2741-CCT (Colour Temperature)
- Available CCT: 3000K, 4000K, 5700K



Product Benefits

- · High visual comfort
- · High luminous efficiency at reduced wattage.
- A sleek and minimalist shape provides distinctive lighting effects for pathway.

Areas of Application

Staircase, Patios, Walkways, Passages, Porches, Entrance & Exits for both Interior & Exterior applications.

Available Finish


Pure polyester powder coat

- Graphite grey
- · Anthracite grey
- Jet black

Accessory

Recess installation mounting sleeve included.



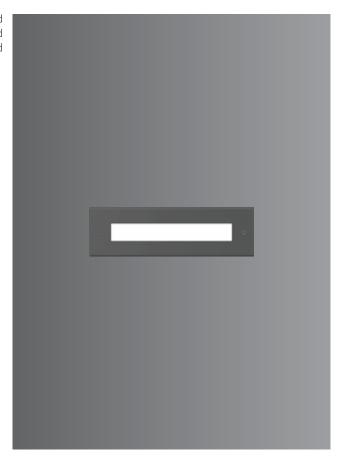

K-LiTE Sudo - Open Frame





Technical Specifications General

ID : 2753 / 2741 System Wattage :6W / 12W LED Driver Integral : Constant Current Input Voltage : 230-240Vac : 50-60 Hz Frequency Operating Voltage : 100-277Vac Operating Temperature :-15°C~+50°C

Physical

Body : Die-Cast Aluminium Diffuser : Translucent Acrylic Gasket : Silicone Mounting Sleeve : ABS Plastic : Wall - Recess Mounting : 240 x 83 x 70

COD (mm)

Light Source

Light Source : NICHIA

LED Lumens : Upto 900 lm / 1800 lm

CRI (Ra) :≥80

LED Colour Temperature : 3000K / 4000K / 5700K

Driver

Power Supply : Integral Power Factor : ≥0.95 THD :<10% Surge Protection : 2KV / 2.5KV Efficiency :>85%

Optical Performance

Colour Temperature : 3000K / 4000K Luminous flux : 12W : 640 lm / 650 lm

Light Distribution : Diffused




















Light Distribution

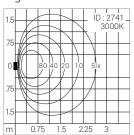

Applied Photometry: H=0.5m

Note:

- · Recessed diffused light.
- Recommended installation height: 400-500 mm
- Recommended spacing: 3 metres



K-LiTE

Sudo Mini - Open Frame

Sudo represents a perfect combination of sleek and aesthetic fixtures designed to provide uniform illumination for low mounting heights where guidance and security lighting is required. Sustainable LED technology offers durability and optimal light output with low power consumption.

Product Description

- Luminaire made of pressure die cast aluminium alloy of high corrosion resistance and non corrosive A2 stainless steel fasteners.
- · Non yellowing UV stabilized translucent acrylic diffuser.
- · Silicone gasket.
- ABS plastic installation housing for preparing the recess opening in wall / stairs for flush mounting.
- · Cable entries for through-wiring of mains supply cable.
- · Integral constant current power supply
- CRI (Ra): ≥80 (>90 On Request)
- Prewired with LED driver and suitable for operating on 240V, 50Hz single phase ac supply.
- Ordering guide: KL-2745-CCT (Colour Temperature)
- Available CCT: 3000K, 4000K, 5700K



Product Benefits

- · High visual comfort
- · High luminous efficiency at reduced wattage.
- A sleek and minimalist shape provides distinctive lighting effects for pathway.

Areas of Application

Staircase, Patios, Walkways, Passages, Porches, Entrance & Exits for both Interior & Exterior applications.

Available Finish


Pure polyester powder coat

- · Graphite grey
- · Anthracite grey
- Jet black

Accessory

Recess installation mounting sleeve included.



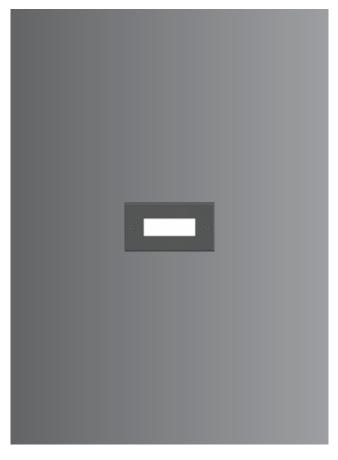

130 -

K-LiTE





-87

Technical Specifications General

ID : 2745 System Wattage : 6W LED Driver Integral : Constant Current Input Voltage : 230-240Vac Frequency : 50-60 Hz Operating Voltage : 100-277Vac Operating Temperature :-15°C~+50°C

Physical

COD (mm)

Body : Die-Cast Aluminium Diffuser : Translucent Acrylic Gasket Silicone Mounting Sleeve : ABS Plastic : Wall - Recess Mounting

Light Source

Light Source : NICHIA LED Lumens : Upto 900 lm CRI (Ra) :≥80

LED Colour Temperature : 3000K / 4000K / 5700K

Driver

Power Supply : Integral : ≥0.95 Power Factor THD :<10% Surge Protection : 2KV Efficiency :>85%

Optical Performance

Colour Temperature : 3000K / 4000K Luminous flux : 286 / 292 lm Light Distribution : Diffused
















: 124 x 83 x70





100-277V

Light Distribution

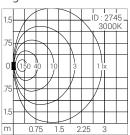

Applied Photometry: H=0.3m

Note:

- · Recessed diffused light.
- Recommended installation height: 300 mm
- Recommended spacing: 2 metres