
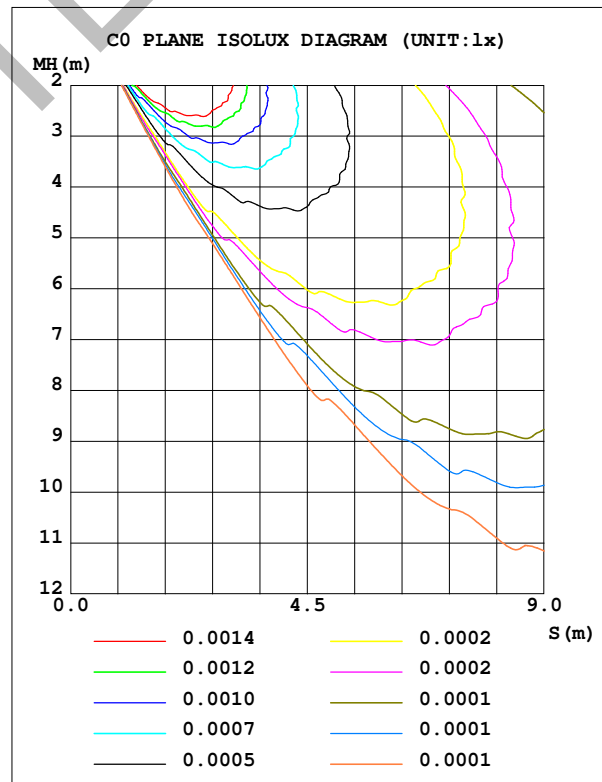


LUMINAIRE PHOTOMETRIC TEST REPORT

Test:U:230.45V I:0.0131A P:2.8702W PF:0.9508 Freq:50.00Hz Lamp Flux:276.36x1 lm		
NAME: SUDO MINI - ASY VERTICAL REEDED FRAME	TYPE:PATH FINDERS	WEIGHT:0.424kg
SPEC.:WW, NICHIA	DIM.: 76 x 87 x 130	SERIAL No.:2145
MFR.: K-LITE	SUR.:	Shielding Angle:

DATA OF LAMP		PHOTOMETRIC DATA				Eff: 24.52 lm/W
MODEL	KL-2750	I _{max} (cd)	87.38	S/MH (C0/180)	0.00	
NOMINAL POWER (W)	3	LOR (%)	25.5	S/MH (C90/270)	0.00	
RATED VOLTAGE (V)	230	TOTAL FLUX (lm)	70.376	η UP, DN (C0-180)	0.0, 25.5	
NOMINAL FLUX (lm)	276.36	CIE CLASS	DIRECT	η UP, DN (C180-360)	0.0, 0.0	
LAMPS INSIDE	1	η up (%)	0.0	CIBSE SHR NOM	0.00	
TEST VOLTAGE (V)	230	η down (%)	25.5	CIBSE SHR MAX	1.00	

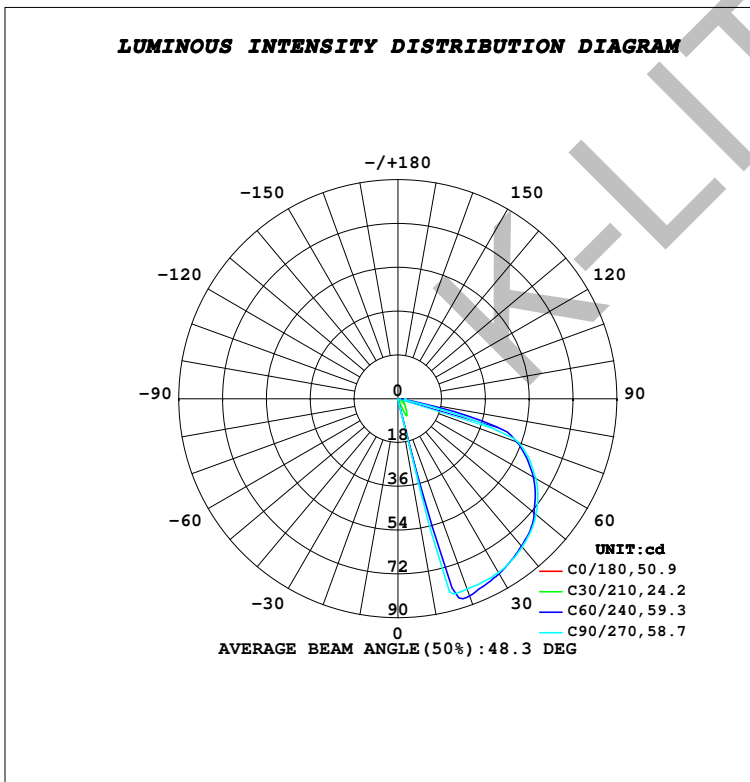

C Range: 0 - 360DEG
 C Interval: 10.0DEG
 Test Speed: HIGH
 Temperature: 25.3DEG
 Operators: K-LITE
 Test Date: 20 October 2020

γ Range: 0 - 90DEG
 γ Interval: 1.0DEG
 Test System: EVERFINE GO-R5000_V2 SYSTEM V2.00.417
 Humidity: 65.0%
 Test Distance: 1.825m [K=1.0000]
 Remarks: