


LUMINAIRE PHOTOMETRIC TEST REPORT


Test:U:230.44V I:0.0153A P:3.3602W PF:0.9553 Freq:49.99Hz Lamp Flux:395.25x1 lm		
NAME: SUDO MINI - OPEN FRAME	TYPE:PATH FINDERS	WEIGHT:0.6Kg
SPEC.:WW, NICHIA	DIM.: 130 x 87 x 76	SERIAL No.:1522
MFR.: K-LITE	SUR.:	Shielding Angle:

DATA OF LAMP		PHOTOMETRIC DATA				Eff: 24.32 lm/W
MODEL	KL-2754	I _{max} (cd)	29.48	S/MH (C0/180)	1.25	
NOMINAL POWER (W)	3	LOR (%)	20.7	S/MH (C90/270)	1.23	
RATED VOLTAGE (V)	230	TOTAL FLUX (lm)	81.710	η UP, DN (C0-180)	0.0, 10.6	
NOMINAL FLUX (lm)	395.25	CIE CLASS	DIRECT	η UP, DN (C180-360)	0.0, 10.1	
LAMPS INSIDE	1	η up (%)	0.0	CIBSE SHR NOM	1.25	
TEST VOLTAGE (V)	230	η down (%)	20.7	CIBSE SHR MAX	1.35	

LUMINOUS INTENSITY DISTRIBUTION DIAGRAM

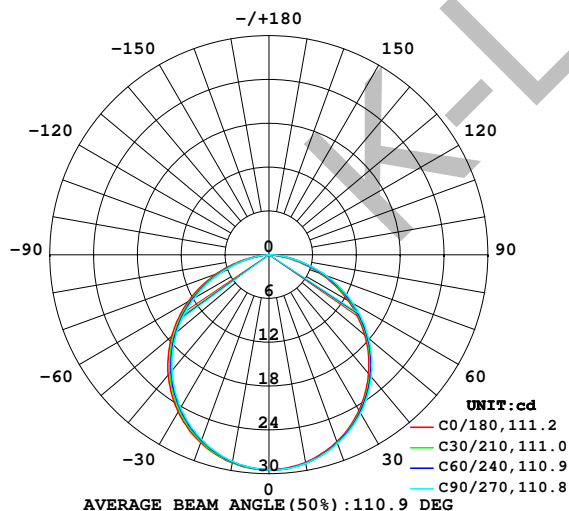

C0 PLANE ISOLUX DIAGRAM (UNIT:lx)

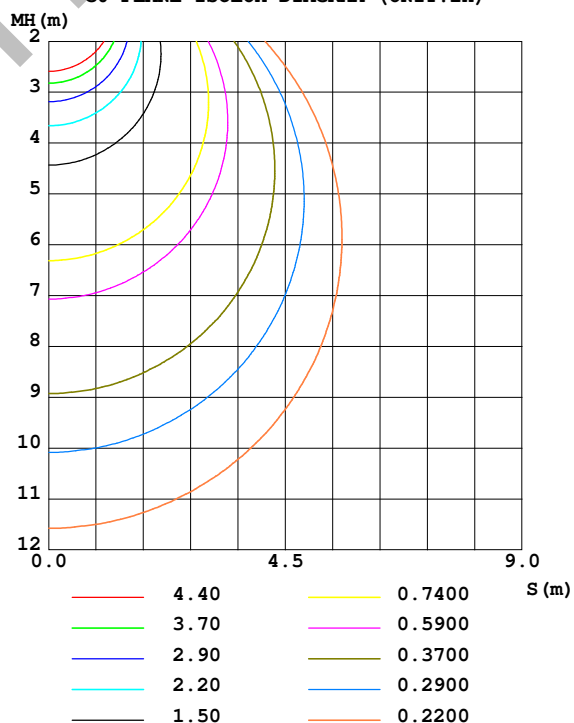

C Range: 0 - 360DEG
 C Interval: 10.0DEG
 Test Speed: HIGH
 Temperature: 25.3DEG
 Operators: K-LITE
 Test Date: 20 July 2020

γ Range: 0 - 90DEG
 γ Interval: 1.0DEG
 Test System: EVERFINE GO-R5000_V2 SYSTEM V2.00.417
 Humidity: 65.0%
 Test Distance: 1.825m [K=1.0000]
 Remarks: