


LUMINAIRE PHOTOMETRIC TEST REPORT

Test:U:230.55V I:0.1107A P:23.502W PF:0.9210 Freq:49.99Hz Lamp Flux:3360x1 lm		
NAME: LINE N DOT - LINEAR WALL WASHER	TYPE: LINEAR LIGHTING	WEIGHT:
SPEC.: CW, NICHIA	DIM.: 312 x 36 x 75	SERIAL No.: 4436
MFR.: K-LITE	SUR.:	Shielding Angle:

DATA OF LAMP		PHOTOMETRIC DATA				Eff: 76.02 lm/W
MODEL	KL-3490	I _{max} (cd)	2286	S/MH (C0/180)	0.84	
NOMINAL POWER (W)	20	LOR (%)	53.2	S/MH (C90/270)	0.45	
RATED VOLTAGE (V)	230	TOTAL FLUX (lm)	1786.7	η UP, DN (C0-180)	0.0, 38.6	
NOMINAL FLUX (lm)	3360	CIE CLASS	DIRECT	η UP, DN (C180-360)	0.0, 14.6	
LAMPS INSIDE	1	η up (%)	0.0	CIBSE SHR NOM	0.50	
TEST VOLTAGE (V)	230	η down (%)	53.2	CIBSE SHR MAX	0.50	

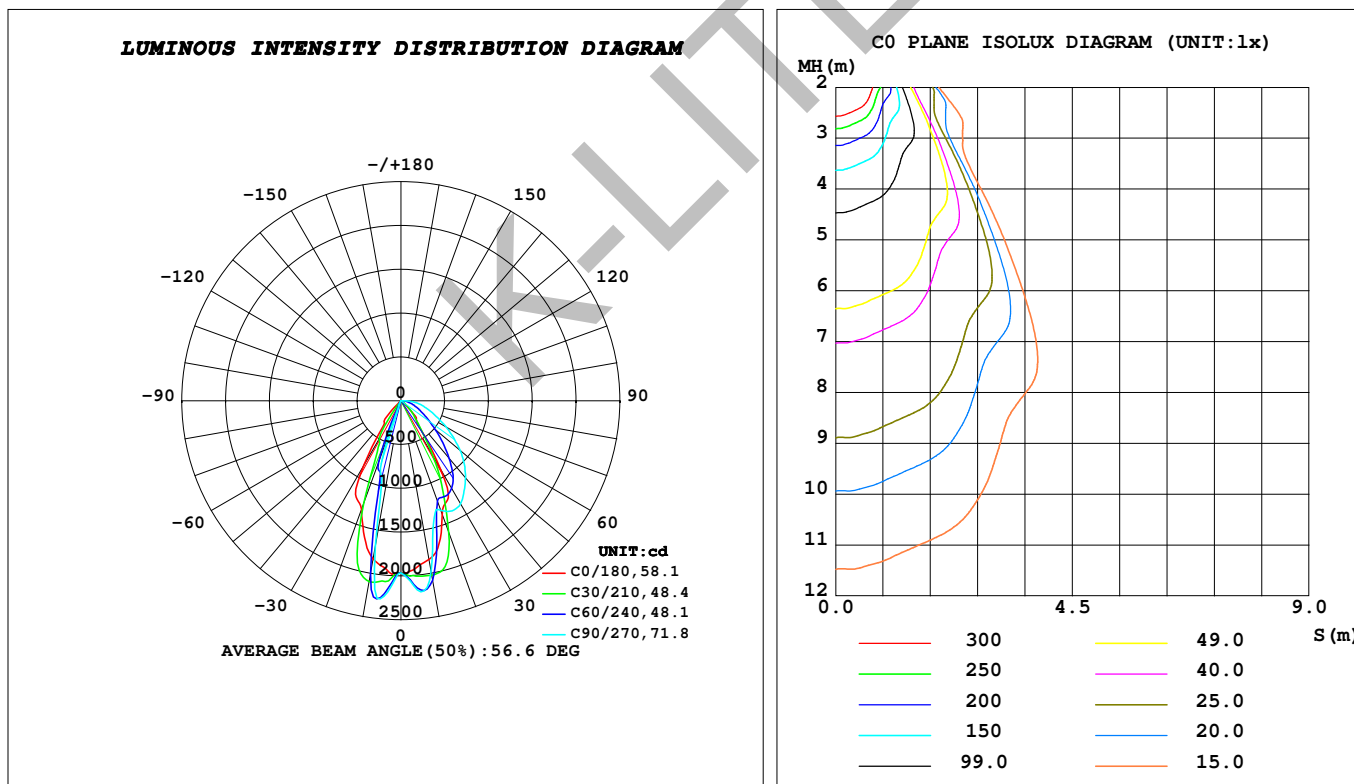

C Range: 0 - 360DEG
 C Interval: 10.0DEG
 Test Speed: HIGH
 Temperature: 25.3DEG
 Operators: K-LITE
 Test Date: 13 April 2022

γ Range: 0 - 90DEG
 γ Interval: 1.0DEG
 Test System: EVERFINE GO-R5000_V2 SYSTEM V2.00.417
 Humidity: 65.0%
 Test Distance: 1.825m [K=1.0000]
 Remarks: