


LUMINAIRE PHOTOMETRIC TEST REPORT


Test:U:230.51V I:0.1799A P:40.355W PF:0.9734 Freq:49.98Hz Lamp Flux:6050x1 lm		
NAME: VELA	TYPE: RECESSED CEILING	WEIGHT:
SPEC.: NW, NICHIA, BA-10°	DIM.: Ø170 x 68	SERIAL No.: 5197
MFR.: K-LITE	SUR.:	Shielding Angle:

DATA OF LAMP		PHOTOMETRIC DATA				Eff: 101.18 lm/W
MODEL	KL-7555	I _{max} (cd)	56345	S/MH (C0/180)	0.19	
NOMINAL POWER (W)	45	LOR (%)	67.5	S/MH (C90/270)	0.19	
RATED VOLTAGE (V)	230	TOTAL FLUX (lm)	4083.2	η UP, DN (C0-180)	0.0, 35.7	
NOMINAL FLUX (lm)	6050	CIE CLASS	DIRECT	η UP, DN (C180-360)	0.0, 31.8	
LAMPS INSIDE	1	η up (%)	0.0	CIBSE SHR NOM	0.00	
TEST VOLTAGE (V)	230	η down (%)	67.5	CIBSE SHR MAX	1.00	

LUMINOUS INTENSITY DISTRIBUTION DIAGRAM

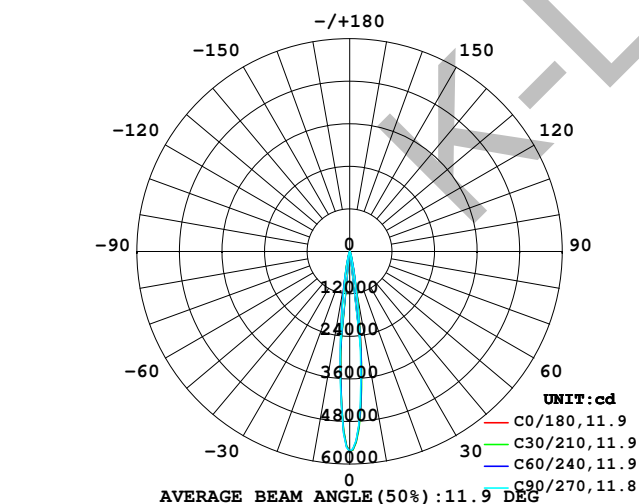

C0 PLANE ISOLUX DIAGRAM (UNIT: lx)

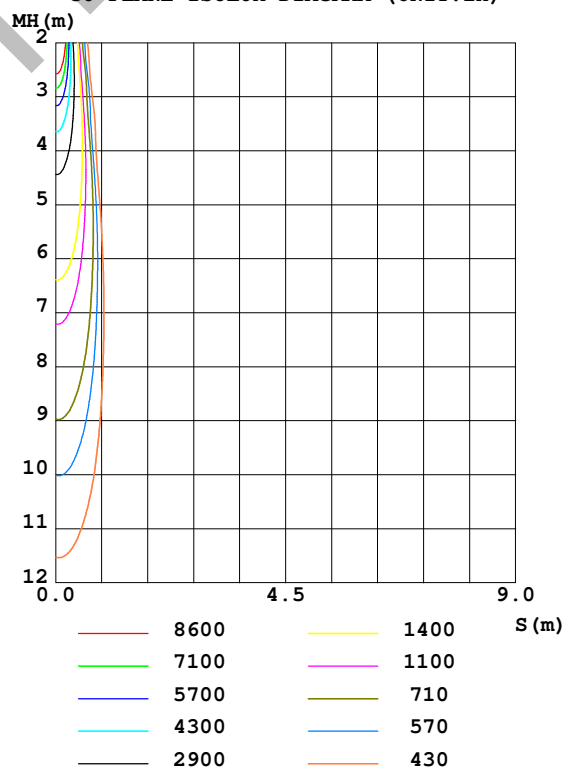

C Range: 0 - 360DEG
 C Interval: 10.0DEG
 Test Speed: HIGH
 Temperature: 25.3DEG
 Operators: K-LITE
 Test Date: 24 November 2022

γ Range: 0 - 90DEG
 γ Interval: 1.0DEG
 Test System: EVERFINE GO-R5000_V2 SYSTEM V2.00.417
 Humidity: 65.0%
 Test Distance: 1.852m [K=1.0000]
 Remarks: