K-LiTE

IP67 Linear Profile

Our IP67 profiles are modular and offers an innovative lighting solution in constrained space which require linear lighting. The profiles are made of extruded aluminium and are available in powder coated white / black and anodised aluminium finish options. Depending upon form selected clear and translucent encapsulation options are available. The aluminium profile and the polyurethane encapsulation lends to IP67 protection class. Various mounting options are available making it a versatile product for various applications.

Product Features

- Luminaire made of extruded aluminium for better thermal management.
- Translucent polyurethane encapsulation.
- Surface / Recessed / Suspended mounting options available.
- IP67 connector on both ends and can be easily installed via mounting clips or adjustable wall clamps.
- Constant voltage LED driver 24V Non integral (to be ordered separately)
- MacAdam LEDs ≤ 3-step
- · High CRI80+
- Dimmable
- Special colour on request (Red, Green, Blue, Amber etc.)
- · Multiple lengths available



Area of Application

Hotel & Resorts, Staircase Lighting, Malls, Restaurants, Receptions, Shopping Complex, Commercial & Business Centers, Residential Lighting and similar applications.

Installation Note

- · Surface, Recessed or Suspended
- Based on site requirement can be glued using PU glue, silicone / grouted or plastered in on-site cutouts.
- · Mounting accessories: Wall clamps / Clips / Suspension kits as per site requirement
- · Luminaire to be ordered with suitable 24V dc power supply.
- Mounting tray for better cable management with slide fit system.

Open Source

Voltage drop information for the feed-in-line (PSU / Control to fixture)

STATIC COL	Max.cable length		
Power (m)	Cable spec	Product run length	PSU-luminaire
10W/m	.34 mm ² / AWG 22	1m / 2m	19m / 10m
20W/m	.34 mm ² / AWG 22	1m / 2m	7m / 3.5m
RGBW			
20W/m	.34 mm ² / AWG 22	1m / 2m	10m / 4.5m
40W/m	.34 mm ² / AWG 22	1m / 2m	4.5m /

Note: Calculation is based on a max. voltage drop of 0.80V and is based on the cable configuration on-site.

Important Note:

- The given data are standard values. Due to tolerances of the manufacturing process and the electrical components, photometric values and electrical power can vary up to 10 - 12%.
- Luminous flux upto -40% with opal transmission.
- In IP67 encapsulated products, tolerance in colour temperature can occur.
- · Light distribution refer online

K-LiTE

Form-16

Power: 5W 10W 15W 20W Length: 500mm 1000mm 1500mm 2000mm

Features_

- · Small form factor
- LED
- CRI Ra>80 (>90 on request)
- SDCM ≤ 3
- L80 / B10 @ 60,000 Hrs
- For ready use with IP67 connectors
- · Encapsulated linear luminaire
- · IP67 protection class
- Mounting tray for better cable management with slide fit system.

Options__

- CCT: 2700K / 3000K / 4000K (Special colour on request)
- · Driver options










Dimension in mm



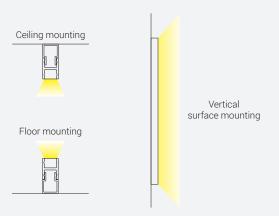

Housing Colour _



High-quality aluminium with powder coated finish in RAL9005 Black fine texture I RAL9016 White fine texture I Anodised Aluminium

Accessories Cabling Accessories

1m Cable

 ID
 Description
 Dimension (mm)

 8319
 End cap - 2 pin

 8320/8321
 Male / Female connector - 2 pin
 0.5m Cable

Extension

cable

End cap

* Fixture manufactured to desired length with multiples of 500mm (not to be cut at site)

Extension cable - 2 pin

* Driver and mounting accessories to be ordered separately




Open Source

Light Distribution refer online___

Lead connector

8322



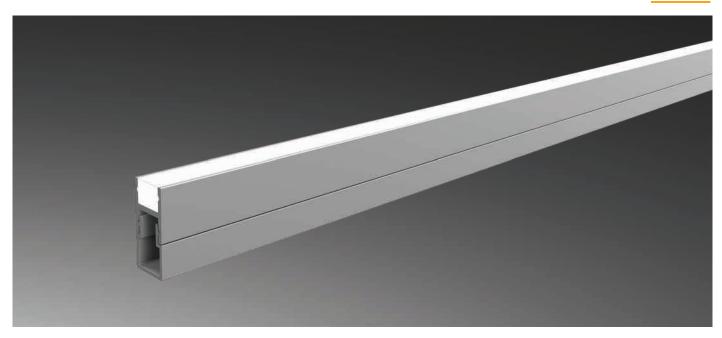

Technical Specifications

Light Source

Light Source

CŘI (Ra) :>80 (>90 on request) LED Colour Temperature 2700K / 3000K / 4000K

(Special colours on request)

General

Driver : Constant Voltage Input Voltage : 220-240Vac Operating Temperature :-15°C~+50°C Operating Voltage : 24Vdc

Power Supply : Non Integral 24V PSU (IP67)

Optical

Tilt : Fixed Beam Angle : 120° (Diffused)

Diffuser Material : Translucent Polyurethane

Encapsulation

Physical

Body : Extruded Aluminium

Mounting : Surface

Finish : White / Black / Anodized Aluminium

Specification

Power (W/m) 10W/m Max.length (m) 2 mts Max.serial run length (m) 5 mts Max.ambient temp.(Ta_{max}) 50°C

- The given data are standard values. Due to tolerances of the manufacturing process and the electrical components, photometric values and electrical power can vary up to 10 - 12%.
- Luminous flux upto -40% with opal transmission.
- In IP67 encapsulated products, tolerance in colour temperature can occur.
- · Light distribution refer online



























Ordering Guide

Surface - Direct

ID	Wattage	Dimension (mm)
3247	5W	500 x 16 x 34
3251	10W	1000 x 16 x 34
3569	15W	1500 x 16 x 34
3570	20W	2000 x 16 x 34

^{*} Voltage drop information refer to page no: 07