

Sudo represents a perfect combination of sleek and aesthetic fixtures designed to provide uniform illumination for low mounting heights where guidance and security lighting is required. Sustainable LED technology offers durability and optimal light output with low power consumption.

### Product Description

- Luminaire made of pressure die cast aluminium alloy of high corrosion resistance and non corrosive A2 stainless steel fasteners.
- Non yellowing UV stabilized clear polycarbonate diffuser.
- Silicone gasket.
- ABS plastic installation housing for preparing the recess opening in wall / stairs for flush mounting.
- Cable entries for through-wiring of mains supply cable.
- Integral constant current power supply
- CRI (Ra) :  $\geq 80$  ( $>90$  - On Request)
- Prewired with LED driver and suitable for operating on 240V, 50Hz single phase ac supply.
- Ordering guide : KL-2768-CCT (Colour Temperature)
- Available CCT : 3000K, 4000K, 5700K



### Product Benefits

- High visual comfort
- High luminous efficiency at reduced wattage.
- A sleek and minimalist shape provides distinctive lighting effects for pathway.

### Areas of Application

Staircase, Patios, Walkways, Passages, Porches, Entrance & Exits for both Interior & Exterior applications.

### Available Finish


Pure polyester powder coat

- Graphite grey
- Anthracite grey
- Jet black

### Accessory

Recess installation mounting sleeve included.



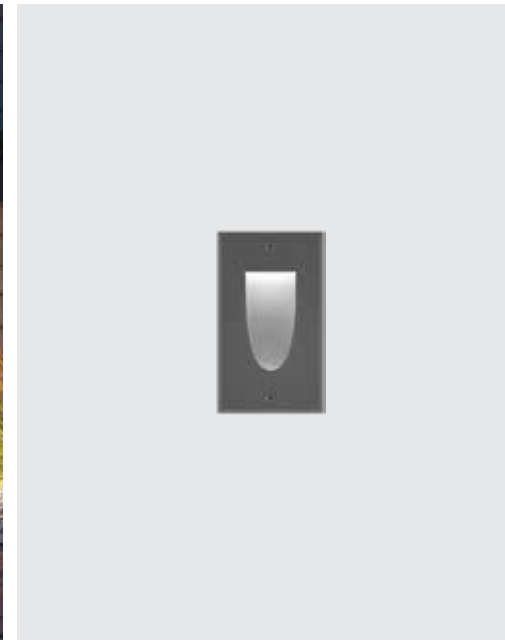

**Technical Specifications**

**General**

ID	: 2768
System Wattage	: 3W LED
Driver Integral	: Constant Current
Input Voltage	: 230-240Vac
Frequency	: 50-60 Hz
Operating Voltage	: 100-277Vac
Operating Temperature	: -15°C~+50°C

**Light Source**

Light Source	: NICHIA
LED Lumens	: 450 lm
CRI (Ra)	: ≥80
LED Colour Temperature	: 3000K / 4000K / 5700K

**Driver**


Power Supply	: Integral
Power Factor	: ≥0.95
THD	: <15%
Surge Protection	: 2.5KV
Efficiency	: >60%

**Physical**


Body	: Die-Cast Aluminium
Diffuser	: Clear Polycarbonate
Gasket	: Silicone
Mounting Sleeve	: ABS Plastic
Mounting	: Wall - Recess
COD (mm)	: 70 x 83 x 124

**Optical Performance**

Colour Temperature	: 3000K / 4000K
Luminous flux	: 94 / 106 lm
Light Distribution	: Spot Type

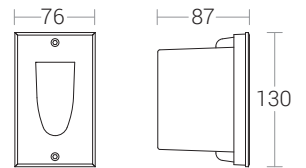

**Light Distribution**

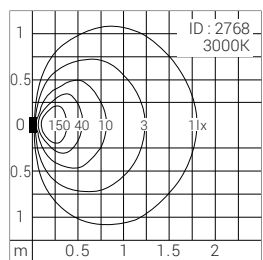

**Note:**

- Recessed floor washer.
- Recommended installation height : 300 mm
- Recommended spacing : 500-700 mm