K-Lite

Zedo Round

Asymmetrical surface mount floor washer with a wide beam for glare free illumination of pathways, entrances etc. Sustainable LED technology offers durability and optimal light output with lower power consumption.

Product Description

- Luminaire made of pressure die cast aluminium alloy of high corrosion resistance and non corrosive A2 stainless steel fasteners.
- Non yellowing UV stabilized clear polycarbonate diffuser.
- Silicone gasket.
- Pressure die cast aluminium installation housing for surface mounting on wall.
- Cable entries for through-wiring of mains supply cable.
- Integral constant current power supply
- CRI (Ra) : ≥80 (90 CRI On Request)
- Prewired with LED driver and suitable for operating on 240V, 50Hz single phase ac supply.
- Ordering guide : KL-2766-CCT (Colour Temperature)
- Available CCT : 2700K, 3000K, 4000K, 5700K



Product Benefits

- High visual comfort
- High luminous efficiency at reduced wattage.
- A sleek and minimalist shape provides distinctive lighting effects for walkway architecture.

Areas of Application

Staircase, Patios, Walkways, Passages, Porches, Entrance & Exits for both Interior & Exterior applications.

Available Finish


Pure polyester powder coated RAL 9004 Signal black RAL 9007 Grey aluminium RAL 7016 Anthracite grey Graphite grey



K-LITE

Zedo Round







AMRIT UDYAN, NEW DELHI

Technical Specifications

General		Light Source	
ID System Wattage Driver Integral Operating Voltage	: 2766 : 12W LED : Constant Current : 100-277Vac	Light Source CRI (Ra) LED Colour Temperature	: NICHIA : ≥80 (90 CRI - On Request) : 2700K / 3000K / 4000K / 5700K
Operating Temperature	:-15°C~+50°C	Driver	
Physical Body Diffuser Gasket Mounting Finish	: Die-Cast Aluminium : Clear Polycarbonate : Silicone : Wall - Surface : Powder coated RAL 9004 Signal black RAL 9007 Grey aluminium RAL 7016 Anthracite grey Graphite grey	Power Supply Input Voltage Frequency Power Factor THD Surge Protection Efficiency	: Integral : 230-240Vac : 50-60 Hz : ≥0.95 : <10% : 2.5KV : >84%
		Optical Performance Light Distribution	: Asymmetrical



Light Distribution

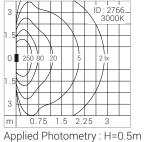

8 (€ ⊕ IP65 IK08

Note:

• Surface floor washer.

• Recommended installation height : 500-700 mm

• Recommended spacing : 3-4 metres

Note : It is our constant endeavor to upgrade the performance of our products. For the latest technical information, IES files and product updates please refer to the website at www.klite.in