

Symmetrical surface mount floor washer with a wide beam for glare free illumination of pathways, entrances etc. Sustainable LED technology offers durability and optimal light output with lower power consumption.

Product Description

- Luminaire made of die cast aluminium of high corrosion resistance and non corrosive SS fasteners.
- Clear toughened glass.
- CRCA (After plating) wall mounting plate for surface mounting on wall.
- Surface mounting on wall using hardware after connecting to the power supply.
- Cable entries for through-wiring of mains supply cable.
- Integral constant current power supply
- CRI (Ra) : ≥ 80
- Prewired with LED driver and suitable for operating on 240V, 50Hz single phase ac supply.
- Ordering guide : KL-4343-CCT (Colour Temperature)
- Available CCT : 2700K, 4000K, 5700K



Product Benefits

- High visual comfort
- High luminous efficiency at reduced wattage.
- A sleek and minimalist shape provides distinctive lighting effects for walkway architecture.


Areas of Application


Staircase, Patios, Walkways, Passages, Porches, Entrance & Exits for both Interior & Exterior applications.

Available Finish

Pure polyester powder coat

- Graphite grey
- Anthracite grey
- Jet black

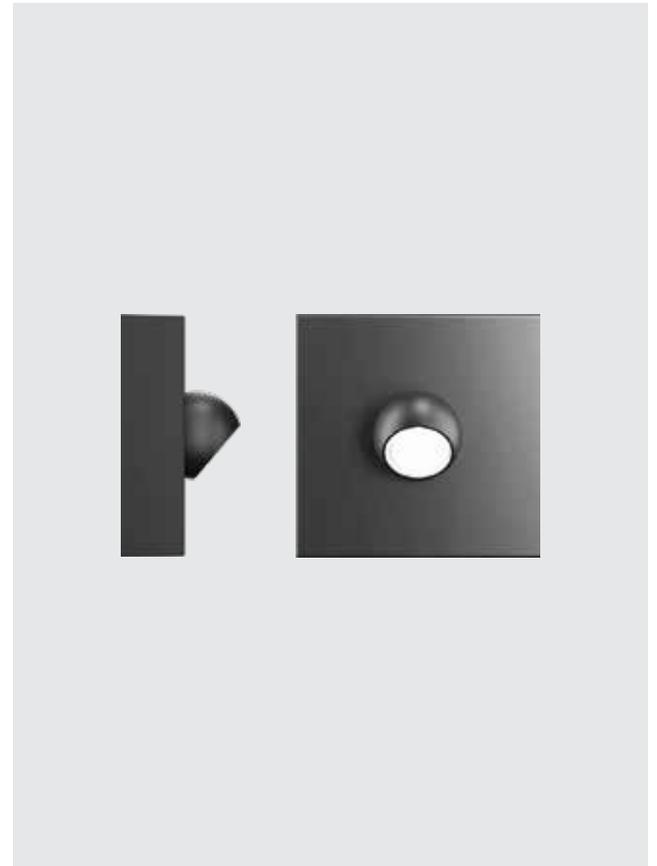

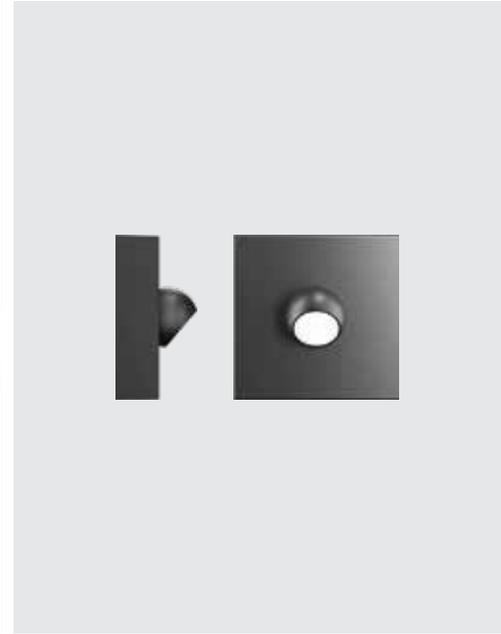

Technical Specifications

General

ID	: 4343
System Wattage	: 3W LED
Driver Integral	: Constant Current
Input Voltage	: 230-240Vac
Frequency	: 50-60 Hz
Operating Voltage	: 100-240Vac
Operating Temperature	: -15°C~+50°C

Physical

Body	: Die-Cast Aluminium
Diffuser	: Clear Toughened Glass
Mounting	: Surface - Wall
Finish	: Powder Coated Graphite Grey / Jet Black Anthracite Grey

Light Source


Light Source	: LUMILEDS / OSRAM
CRI (Ra)	: ≥80
LED Colour Temperature	: 2700K / 4000K / 5700K

Driver

Power Supply	: Integral
Power Factor	: ≥0.9
THD	: <15%
Surge Protection	: 2KV
Efficiency	: >70%

Optical Performance

Light Distribution	: Symmetrical
--------------------	---------------

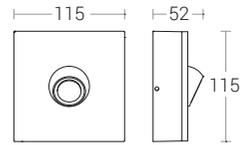

Mounting Detail

