# K-LiTE

# Lucy - Column Light Series

Elegant column lighting feature, which is suitable for both modern and classic architecture. Ideal for creating orientation with exceptional visual comfort. These luminaries offer general ambient light in open spaces giving a sense of security in night-time. Clean Lines and pure form are the underlying elements in this series of column light, designed to provide rotationally symmetrical illumination, Light emission 360°.

#### **Technical Specifications**

- Luminaire made of extruded aluminium alloy (grade 6063) with die-cast aluminium components and non corrosive SS fasteners.
- For optimum illumination, these luminaries can be supplied in three different heights.
- Non yellowing UV stabilized translucent polycarbonate diffuser.
- Silicone gasket.
- MS mounting plate with an anchorage unit made out of hot dip galvanised steel for extra guarantee against corrosion. Luminaire can be aligned on the mounting plate around 360°.
- Cable entries for through-wiring of mains supply cable.
- Integral constant current power supply
- CRI (Ra) : ≥80 (90 CRI On Request)
- Prewired with LED driver and suitable for operating on 240V, 50Hz single phase ac supply.
- Ordering guide : KL-4665-CCT (Colour Temperature)
- Available CCT : 2700K, 4000K, 5700K

8 BIS	Œ		BA360°	IP65	IK10	>60,000 h L70 B10	SDCM ≤ 3	
----------	---	--	--------	------	------	----------------------	-------------	--

### Product Benefits

- Practical . Elegant . Efficient
- Timeless modern design options.
- Easy to maintain, robust and durable construction.
- Soft diffused lighting protects pedestrians from glare and provides distinctive lighting with exceptional visual comfort.
- Sustainable LED technology offers durability and optimal light output with low power consumption.

### Area of Application

Suitable for Private & Public areas, Illuminating Driveways, Pathways, Building surrounds, Entrances, Squares & Gardens, Promenades.

Available Finish

Pure polyester powder coated

- Graphite grey
- Anthracite grey
- Jet black



# **K-LITE**



## **Technical Specifications**

### General

ID	: 4665 /
System Wattage	: 50W L
Driver Integral	: Consta
Input Voltage	: 230-24
Frequency	: 50-60
Operating Voltage	: 100-2
Operating Voltage Operating Temperature	

#### Physical Body

Diffuser

Mounting Finish

8 BIS

Œ

n

BA360°

IP65

age	: 4665 / 4667 : 50W LED
l	: Constant Current
	: 230-240Vac
	: 50-60 Hz
tage	: 100-277Vac
nperature	:-15°C~+50°C
	: Extruded Aluminium : Translucent


Polycarbonate : Surface Powder Coated Graphite grey / Jet black Anthracite grey


IK10

SDCM ≤ 3

>60,000 h L70 B10

# Light Source

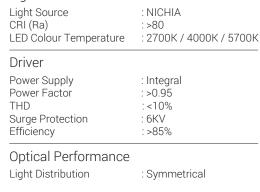

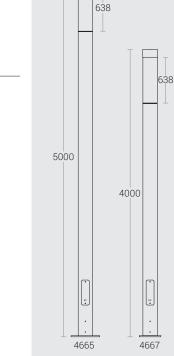

⊢Ø200

