




REVO

Power : 30W / 40W 60W / 80W 90W
Length : 1188mm 2365mm 3540mm

Smart Pendant

REVO is a fresh new lighting solution when projecting the interior of an office or any commercial space. Its high-quality housing in powder coated finish makes it a bold and stylish luminaire, available with various optic solutions ; reflector (modular), opal, prismatic or asymmetric; and direct / indirect light distribution. Used as an individual profile or put together in continuous lines or shapes.



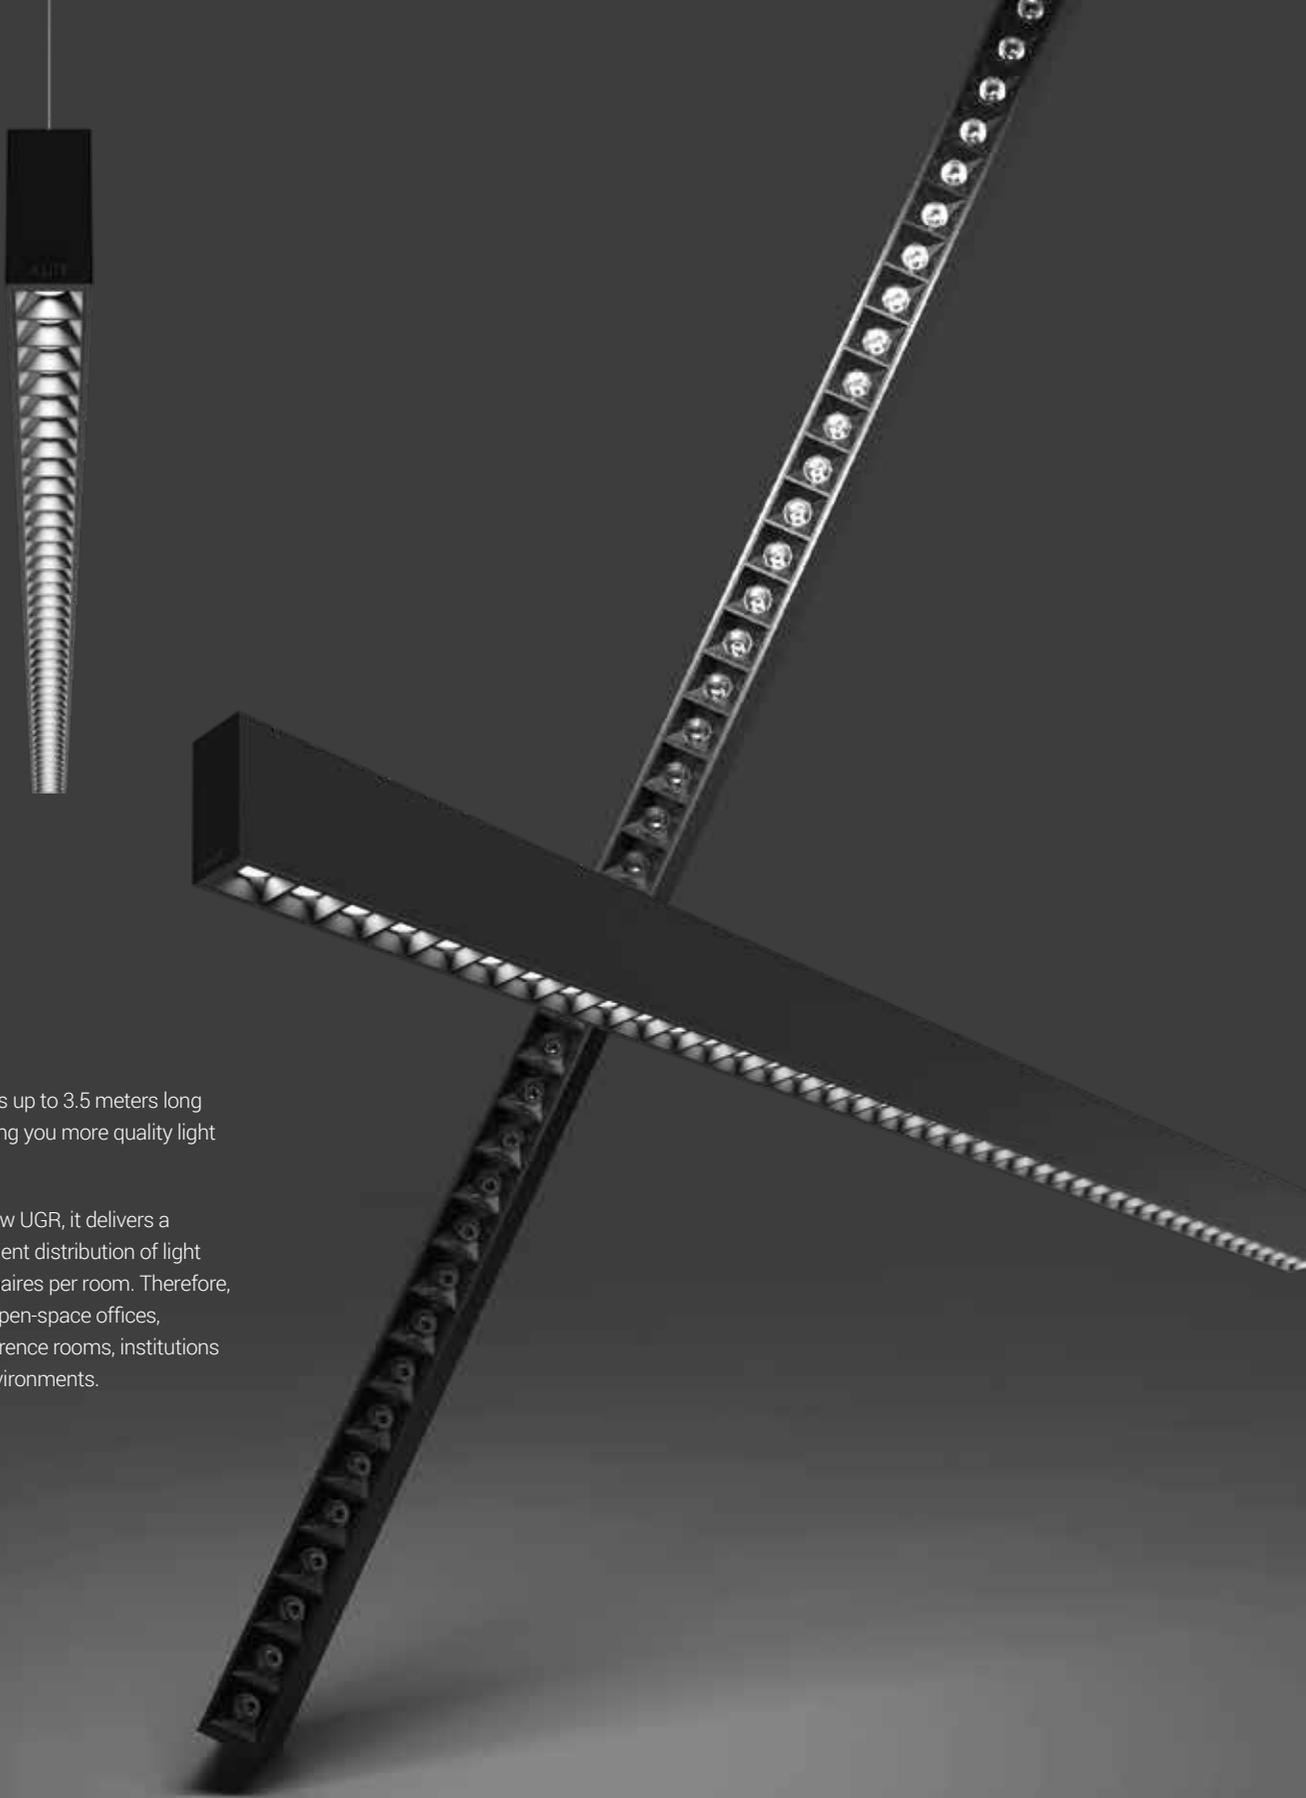


REVO

MINIMALIST

Revo impresses with its up to 3.5 meters long elegant housing, bringing you more quality light with cost-savings.

Due to its length and low UGR, it delivers a homogenous and efficient distribution of light that enables less luminaires per room. Therefore, it is most suitable for open-space offices, corridors, foyers, conference rooms, institutions and other spacious environments.

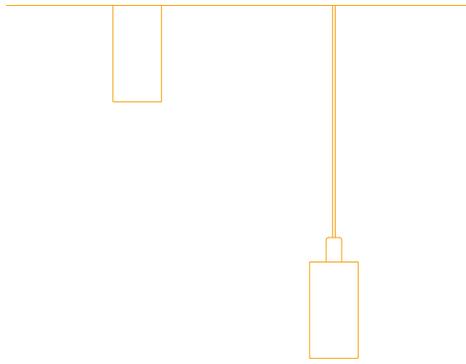

REVO

Flexible Design Multiple Applications

Revo luminaire is a versatile solution for projects that demand high quality of the lighting system and high visual comfort. With its modular design, the Revo can be used as an individual fixture or as a combination of luminaires put together in continuous lines.

K-LITE

REVO DOT-S

Power : 64W 96W 80W 160W
 Length : □719mm □1316mm □719mm □1316mm



Features

- NICHIA LED's
- 3000K / 4000K / 5700K or TW 2700K to 5700K
- Ra>80 (>90 On Request)
- SDCM ≤ 3
- L70 / B10 @ 60,000 Hrs
- Standard suspension kit 1M




Options

- Through wiring
- Dimmable options




L2: Vaccum Metalized Chrome Finish, UGR <12

Beam Angle




Accessories

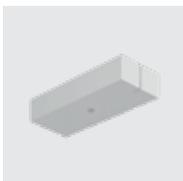


Canopy Kit
 For control unit
 Bespoke Colour Options

PENDANT - LENS

PENDANT - DIFFUSER

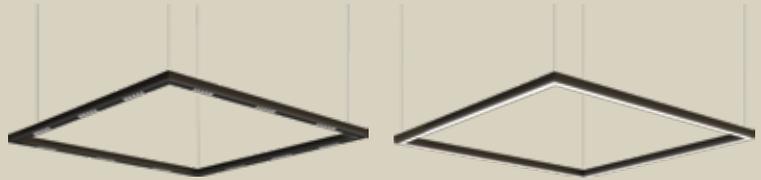

Dimension in mm

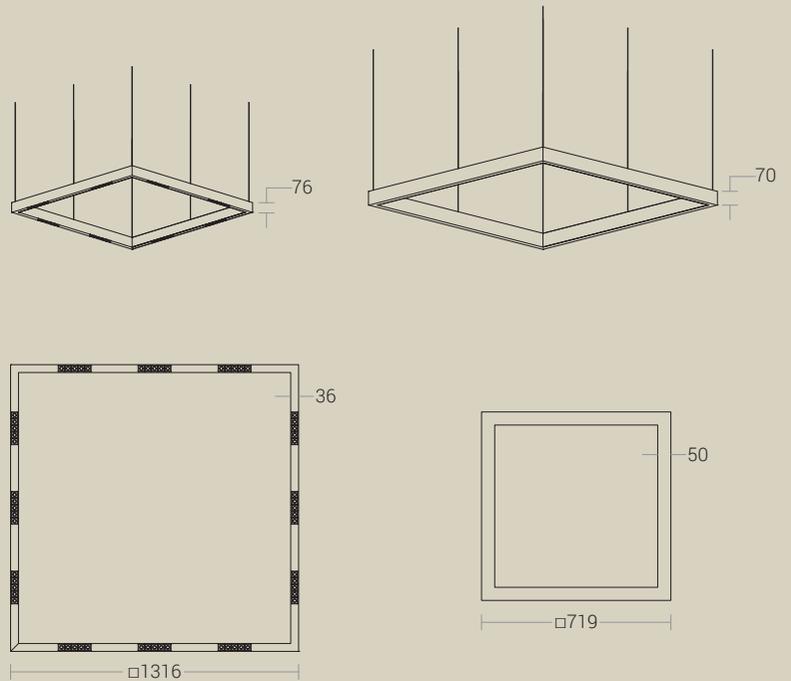

Housing Colour

- High-quality aluminium with powder coated finish in RAL9005 Black fine texture | RAL9016 White fine texture | RAL9006 Grey fine texture

Light Distribution refer online



L2



Technical Specifications

General

Driver : Constant Current
 Input Voltage : 220-240Vac
 Operating Temperature : +25°C~+55°C

Physical

Body : High-Grade Aluminium
 Mounting : Suspended
 Finish : White(RAL9016)
 Black(RAL9005)
 Grey (RAL 9006)

Light Source

Light Source : NICHIA
 CRI (Ra) : >80 (>90 On Request)
 LED Colour Temperature : 3000K / 4000K / 5700K

Driver

Power Supply : Integrated
 Power Factor : >0.90
 THD : <10%
 Surge Protection : 3KV
 Efficiency : >85%

Optical

Efficiency : >90%
 Tilt : Fixed
 Beam Angle : 34°, 48°
 Diffuser/Lens Material : Polycarbonate
 Secondary Reflector : Vacuum Metalized
 Chrome Finish
 UGR : <12

Ordering Guide

Pendant - Lens

| ID | Wattage | Dimension (mm) |
|------|---------|-----------------|
| 3505 | 64W | □719 x 36 x 76 |
| 3506 | 96W | □1316 x 36 x 76 |

Pendant - Diffuser

| ID | Wattage | Dimension (mm) |
|------|---------|-----------------|
| 3507 | 80W | □719 x 50 x 70 |
| 3508 | 160W | □1316 x 50 x 70 |