K-LiTE Cyrilla Bollard

Decorative bollard suitable for classical architecture, create a pleasant light distribution with a high degree of visual comfort. These luminaries offer shielded glare free illumination of ground surface and are perfect for illuminating entrances, footpaths as well as garden and landscape architecture.

Product Description

- Luminaire body made of pressure die-cast aluminium with extruded aluminium supporting arm and SS fasteners.
- · Translucent polycarbonate diffuser.
- For optimum coordination with lighting situation, these luminaries can be supplied in two different mounting heights.
- · Luminaire integrated with 12W LED.
- Die-cast aluminium mounting plate for bolting onto a foundation.
- · Cable entries for through-wiring of mains supply cable
- Integral constant current power supply
- CRI (Ra): ≥80 (90 CRI On Request)
- Prewired with LED driver and suitable for operating on 240V, 50Hz single phase ac supply.
- Ordering guide: KL-24737-CCT (Colour Temperature)
- · Available CCT: 2700K, 3000K, 4000K, 6500K.



Product Benefits

- · High luminous efficiency at reduced wattage.
- · Elegant, Robust design
- · Quick installation and low assembly costs.
- Dark sky compliant protects pedestrians from glare, in addition to preventing spill light above the horizontal plane.
- Sustainable LED technology offers durability and optimal light output with low power consumption.

Area of Application

Suitable for gated community and non-public / low density public areas.

Available Finish

Pure polyester powder coated RAL 9004 Black RAL 9007 Grey aluminium RAL 7016 Anthracite grey Graphite grey



K-LiTE Cyrilla Bollard





THE RAMAYANA HOTEL, AYODHYA

Technical Specifications General

ID : 24737 / 24748 System Wattage : 12W LED Driver Integral : Constant Current Operating Voltage : 100-277Vac Operating Temperature :-15°C~+50°C

Physical

: Die-Cast Aluminium Body Arm : Extruded Aluminium Diffuser : Translucent polycarbonate Mounting : Surface - Floor : Powder coated Finish RAL 9004 Black

RAL 9007 Grey aluminium

RAL 7016 Anthracite grey

Graphite grey

Light Source

Light Source : CITIZEN COB

CRI (Ra) : >80 LED Colour Temperature : 2700K / 3000K / 4000K

/6500K

Driver

Power Supply : Integral Input Voltage : 230-240Vac Frequency : 50-60Hz Power Factor :>0.95 : <10% Surge Protection : 4KV Efficiency :>80%

Optical Performance

Light Distribution : Symmetrical

500 360 □206

24748

24737













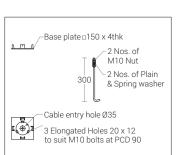

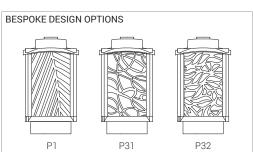

Note: It is our constant endeavor to upgrade the performance of our products. For the latest technical information, IES files and product updates please refer to the website at www.klite.in