K-LiTE Nebula Midi

LED compact spot light luminaires designed to provide directional light. The luminaires comes with a connecting cable and an earth spike for portable installation or bracket for permanent installation on a wall, under a ceiling or on a column.

#### **Product Description**

- Luminaire made of pressure die cast aluminium alloy of high corrosion resistance and non corrosive stainless steel fasteners.
- · Clear toughened glass.
- Mounting earth spike or die-cast aluminium bracket arrangement to facilitate easy installation at any desired location.
- · Swivel range of 0°-90°.
- Luminaire supplied with 0.5 metre cable length and a IP67 connector.
- · Silicone gasket.
- Prewired with GU10 holder and suitable for operation on 240V, 50Hz single phase ac supply.



#### **Product Benefits**

- Sturdy construction in order to maintain performance of the luminaire and to reduce maintenance costs.
- · Quick & simple installation.
- Clear glass in the front with continuous rubber gasket to ensure adequate sealing against ingress of moisture, dust, insects etc.,

#### Areas of Application

Pathways, Parks, Sculptures, Gardens, Structures and Landscape lighting.


#### Available Finish


Pure polyester powder coated


- Graphite grey
- · Anthracite grey
- Jet black

#### Accessory



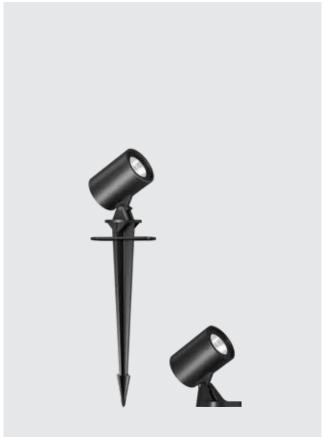

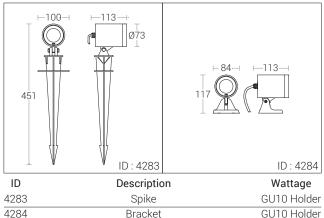

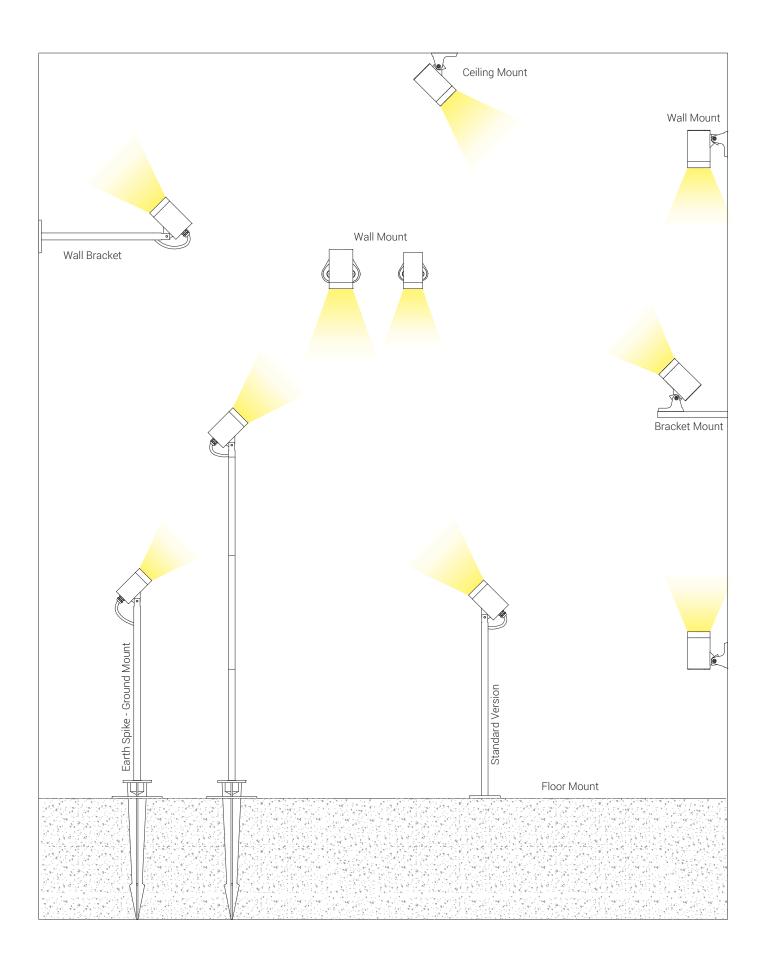

### **K-LiTE**

#### ANTI-GLARE VISOR



	8295	Nebula Micro	Ø45 x 58
	8306	Nebula Mini	Ø55 x 64
	8308	Nebula Midi	Ø76 x 76
	8310	Nebula	Ø100 x 79

The Push-on visor can be installed by 360° and prevents lateral glare from one direction up to 45°. The cylindrical screen has a number of openings in it that allows water to flow out if it is fixed pointing upwards.

#### HONEY COMB LOUVRE - GLARE CUT-OFF

The Internal louvre prevents a lateral glare from all directions up to 45°.



8333	Nebula Micro / Nebula Mini
8334	Nebula Midi
8335	Nebula

#### SPILL CONTROL SNOOT



8296	Nebula Micro	Ø45 x 75
8307	Nebula Mini	Ø55 x 85
8309	Nebula Midi	Ø76 x 100
8323	Nebula	Ø100 x 125

Push-on snoot for the lateral shielding of stray light.

The cylindrical screen has a number of openings in it that allows water to flow out if it is fixed pointing upwards.

#### **MOUNTING**




TREE STRAP 8275 1 metre



TREE STRAP CLAMP ID: 8343

#### SPLIT VERSION

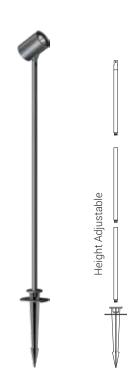

# 1150 250 250 8349 Spike Mount 1150

## ORDERING GUIDE Eg: 4266 (Nebula Mini) + 8349 (Spike Mount) Bracket will not be added when you ordering with Floor Mount / Spike Mount Suitable for

#### STANDARD VERSION



#### **OPTICS**





Nebula Nano / Micro BA 8°/12°/24°/40°/60°/40°x11°

•



Nebula Micro / Nebula Mini / Nebula Midi

Nebula Mini / Nebula Midi / Nebula 15°/25°/40°







