


K-LITE




AARSH

DISCOVER
AARSH



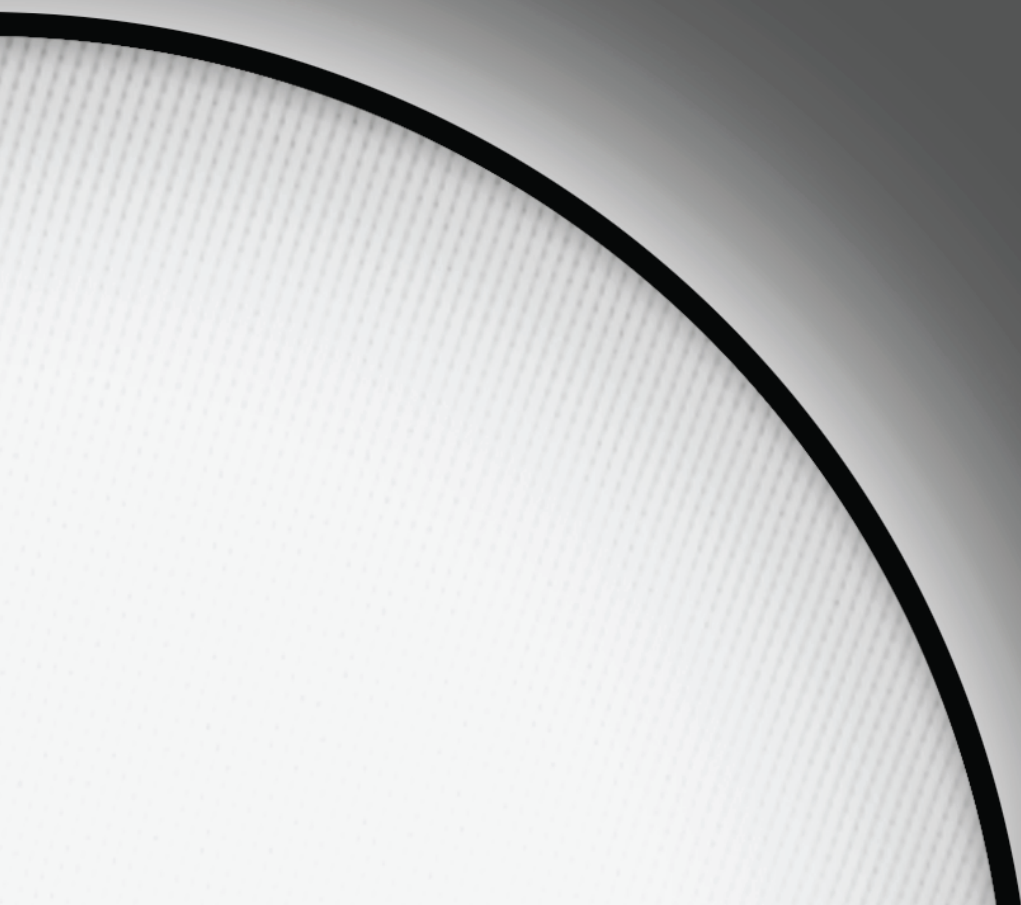




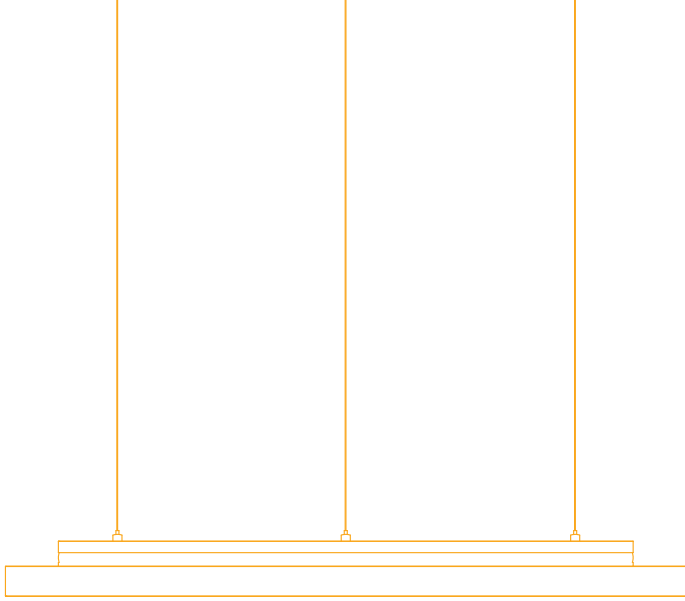

AARSH

Elegant Design Multiple Applications

Aarsh luminaire is a creative downlight brings eye-pleasing illumination to architectural and commercial interiors. Sleek pendant / surface downlight could meet any modern architectural lighting design concept.


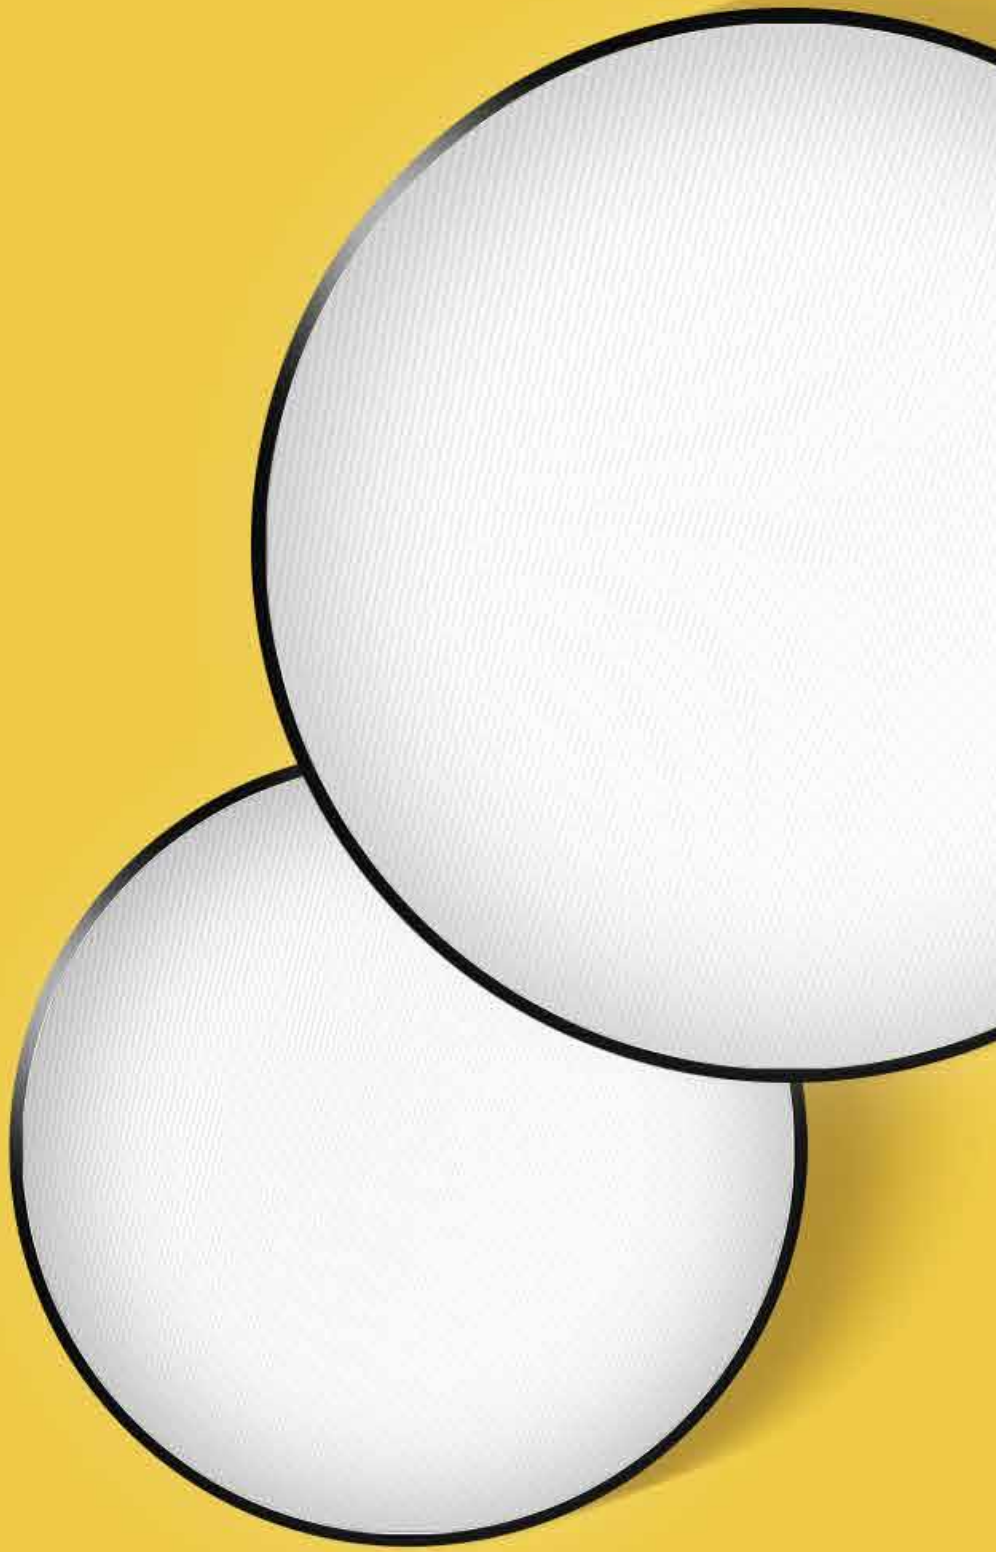



UGR<19

Uniform and diffuse light suitable for workplaces

High-end and innovative technology

Maximum efficiency and uniformity

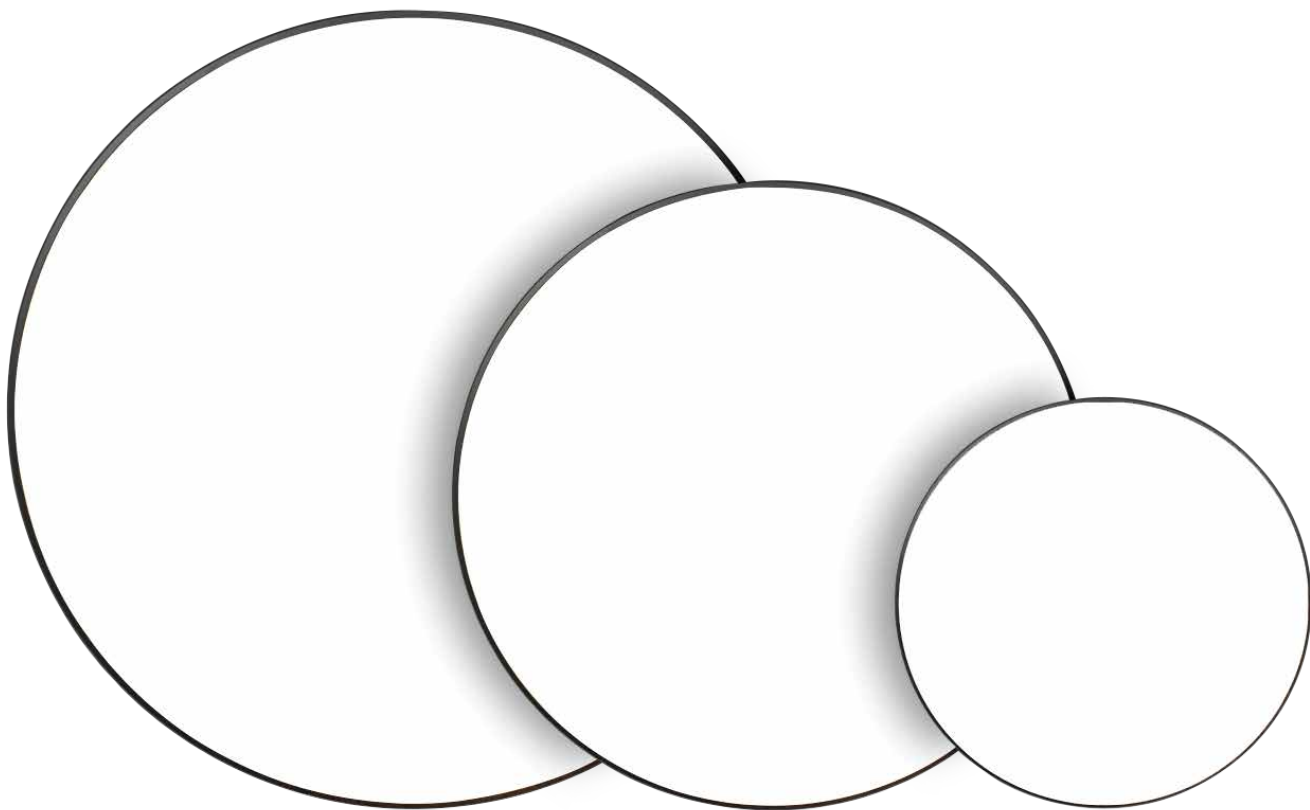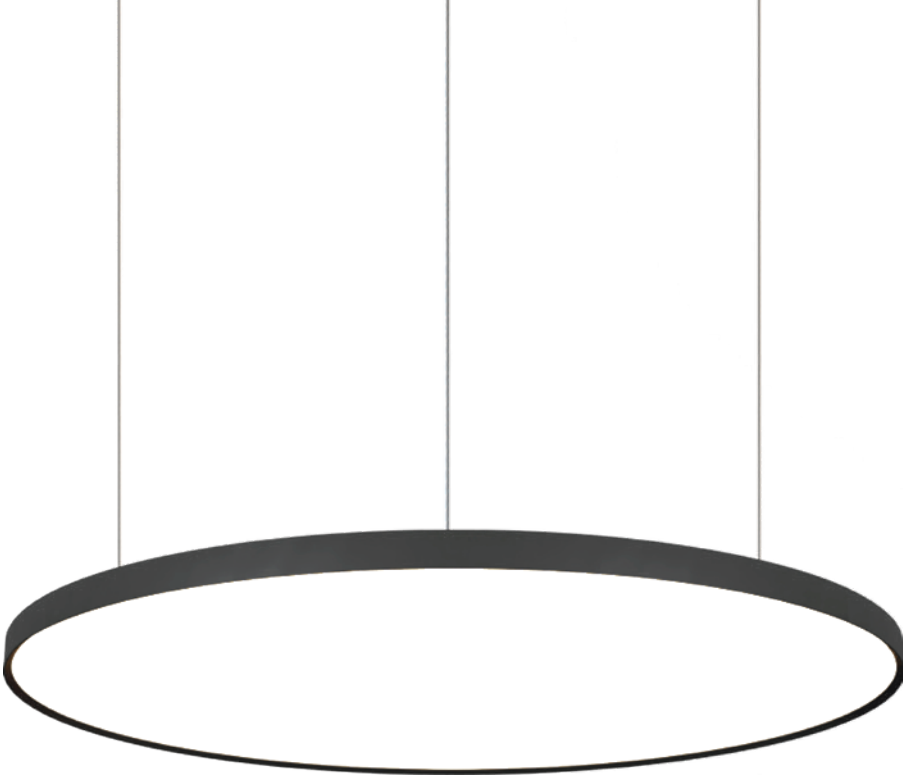

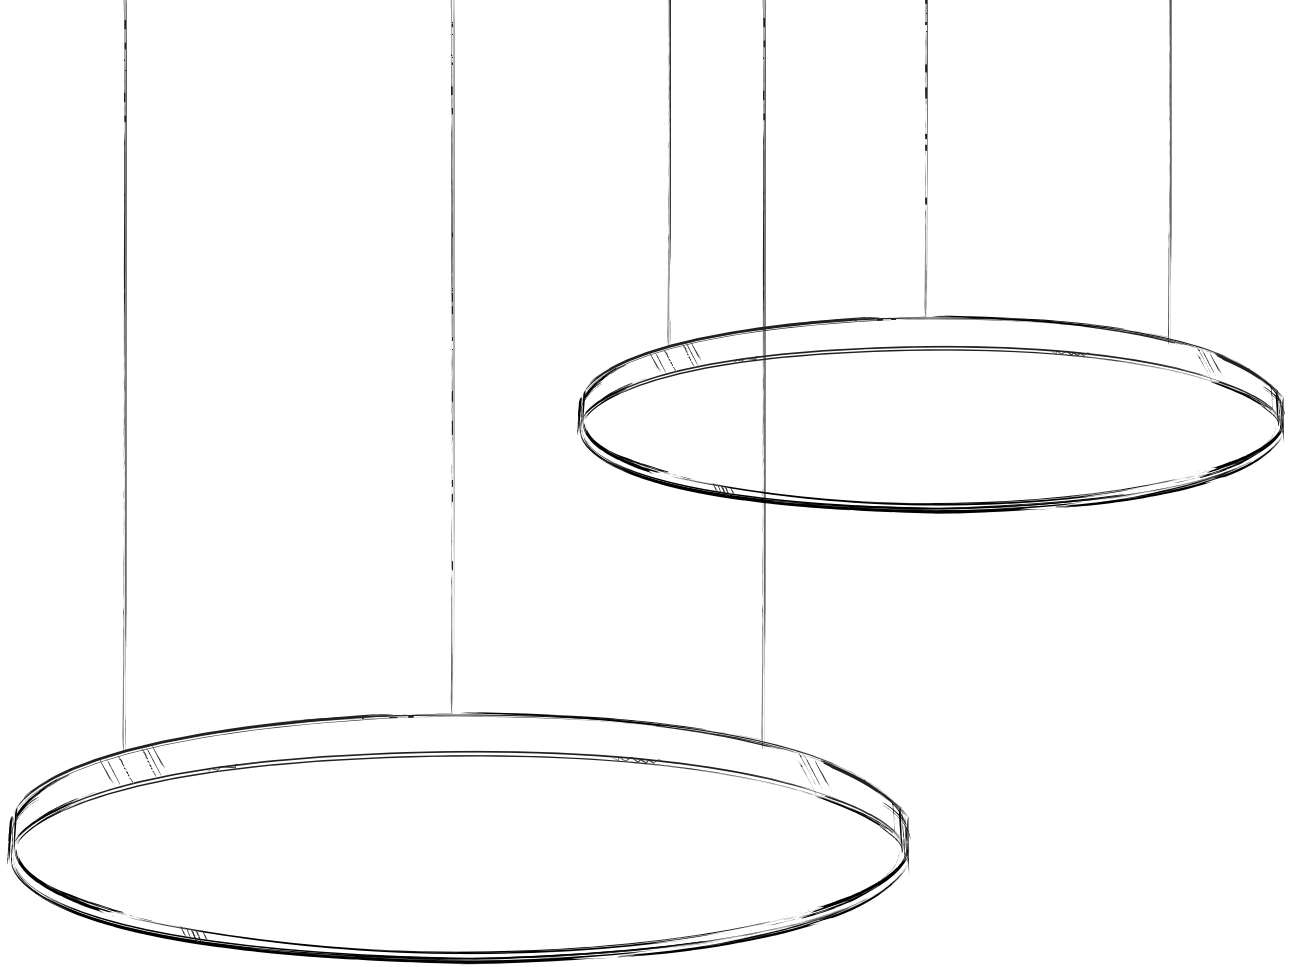

AARSH


The beauty of the form art of circle is aarsh.

The circle is a set the features of symmetry, balance, harmony and integrity in one. It visually gives people an artistic beauty that is full, inclusive, endless and unified. The minimalist design with no fuss interprets the pure shape charm. It has been engineered to be extremely versatile and can be used in many different ways.

At first glance, Aarsh looks like a beautiful miniature moon. Its unique shape and texture make it an eye-catching and attractive addition to any room. But Aarsh is more than just a decorative item. It has been engineered to be extremely versatile and can be used in many different ways.

Product Description

- Ring shaped body made of extruded aluminium (Grade 6063).
- High efficiency Translucent acrylic diffuser for glare free, uniform light distribution, additional Prismatic diffuser available on request for better glare control.
- Adjustable stainless steel suspension kit(1 or 2 metre) available on request.
- Colour rendering index (CRI) is ≥ 80
- Cable entries for through-wiring of mains supply cable
- Integral constant current power supply.
- Suitable for operation on 240V, 50Hz single phase ac supply.
- Ordering guide : KL-2850-CCT (Colour Temperature), Tunable (On Request)
- Available CCT: 3000K, 4000K (6000K On Request).



Product Benefits


- High luminous efficiency at reduced wattage.
- Environmental friendly.
- Visual comfort with Elegance, Functionality.
- Sturdy construction in order to maintain performance of the luminaire and to reduce maintenance costs.

Area of Application

Corporate Offices, Lobbies, Shopping Malls, Restaurants, Receptions, Commercial & Business Centers.

Available Finish

White / Black epoxy polyester powder coating.

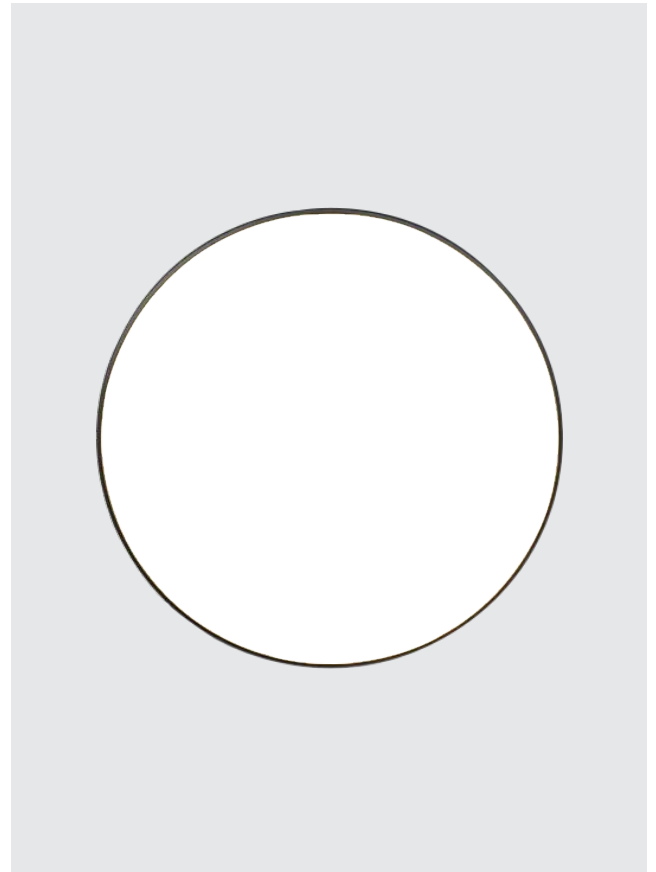



Technical Specifications

General

ID	: 2850 / 2842 / 2821
System Wattage	: Upto 60W / 90W / 120W LED
Driver Integral	: Constant Current
Input Voltage	: 230-240Vac
Frequency	: 50-60 Hz
Operating Voltage	: 100-270Vac

Physical

Body	: Extruded Aluminium
Diffuser	: Translucent Acrylic / Prismatic (On request)
Mounting	: Surface / Pendant
Finish	: White / Black

Light Source

LED Colour Temperature	: 3000K / 4000K (6000K On Request)
Light Distribution	: Diffused
CRI (Ra)	: ≥80


Driver

Power Supply	: Integral
Power Factor	: ≥0.95
THD	: <10%
Surge Protection	: 4KV
Efficiency	: >88%


Optical

Colour Temperature	: 4000K
Luminous flux	: 10415 lm for 90W
Light Distribution	: >100°

For other IES files - Please refer Online




Photometric Data

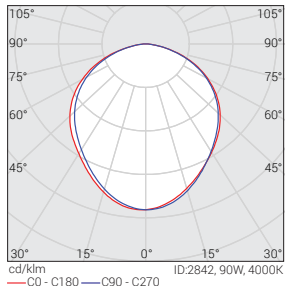

Accessories


Pendant

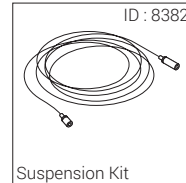

Description

Adjustable stainless steel suspension kit (1 metre)- 4 Nos. available on request at extra cost.

Prismatic (Optional)

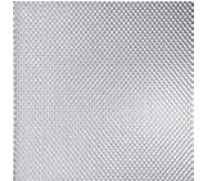

Aarsh Typologies



An Ultra Slim aluminium profile hosts a MCPCB for an absolutely uniform light distribution. The prismatic pattern ensures maximum efficiency and uniformity in direct emission. Available as suspension and wall / ceiling \varnothing 600mm / \varnothing 900mm / \varnothing 1200 mm

PENDANT MOUNT



AARSH Ø600
WW / NW



WW (>100°) 60W
NW (>100°) 60W



AARSH Ø900
WW / NW



WW (>100°) 90W
NW (>100°) 90W




AARSH Ø1200
WW / NW



WW (>100°) 120W
NW (>100°) 120W


SURFACE - CEILING MOUNT

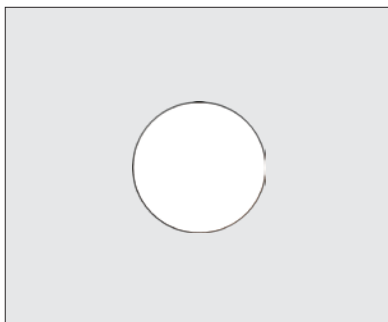

AARSH Ø600
WW / NW




WW (>100°) 60W
NW (>100°) 60W

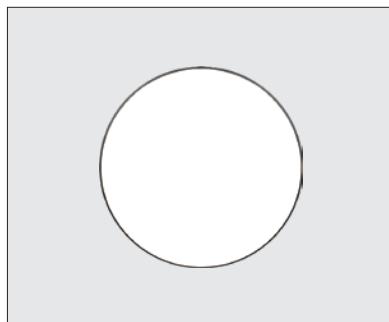

AARSH Ø900
WW / NW



WW (>100°) 90W
NW (>100°) 90W

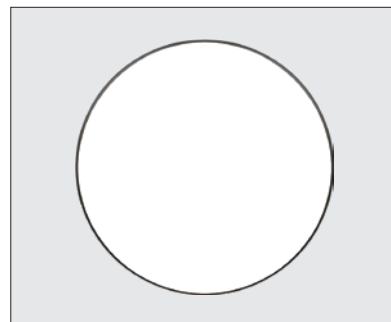



AARSH Ø1200
WW / NW




WW (>100°) 120W
NW (>100°) 120W






Aarsh Typologies

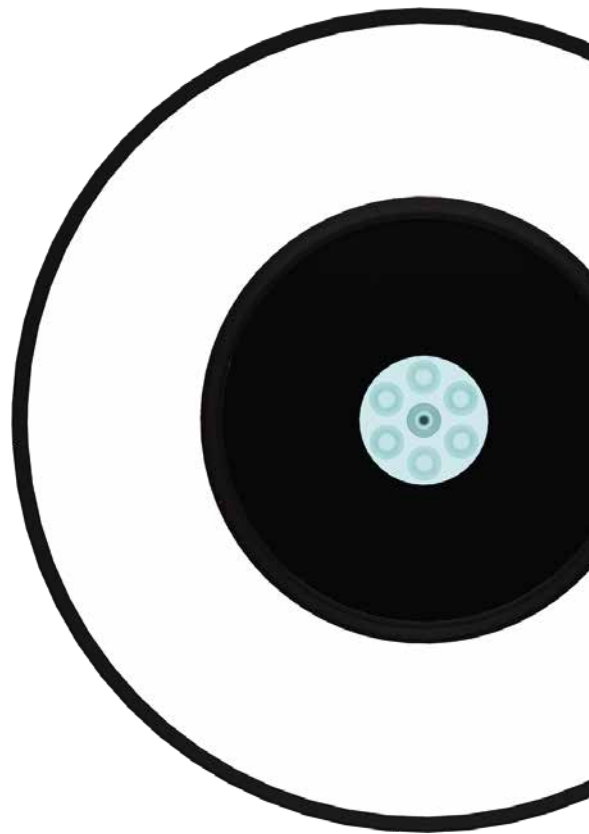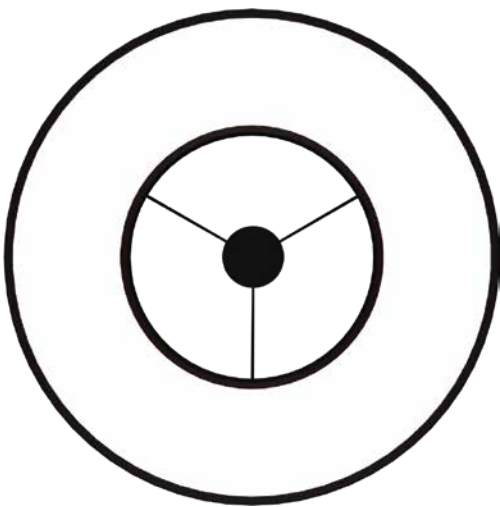

Aarsh Typologies

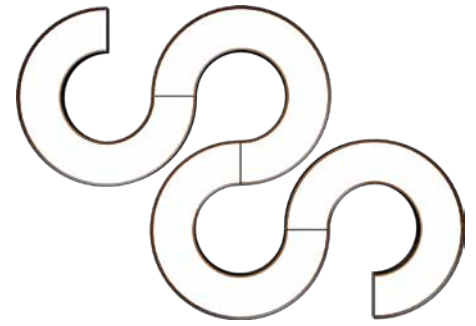

Aarsh Typologies

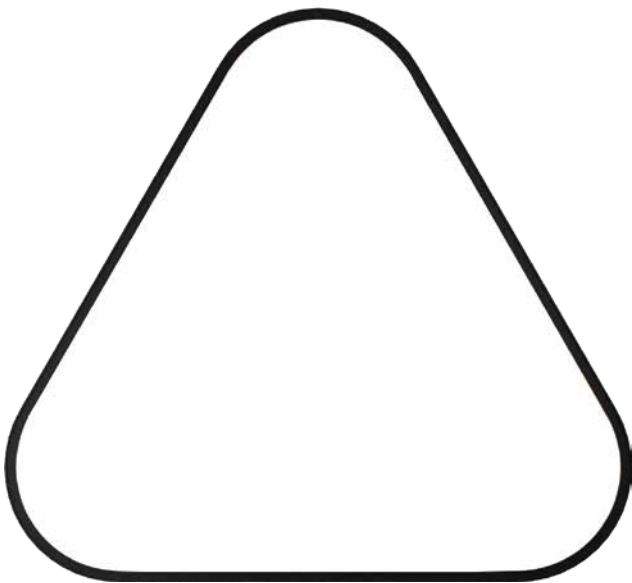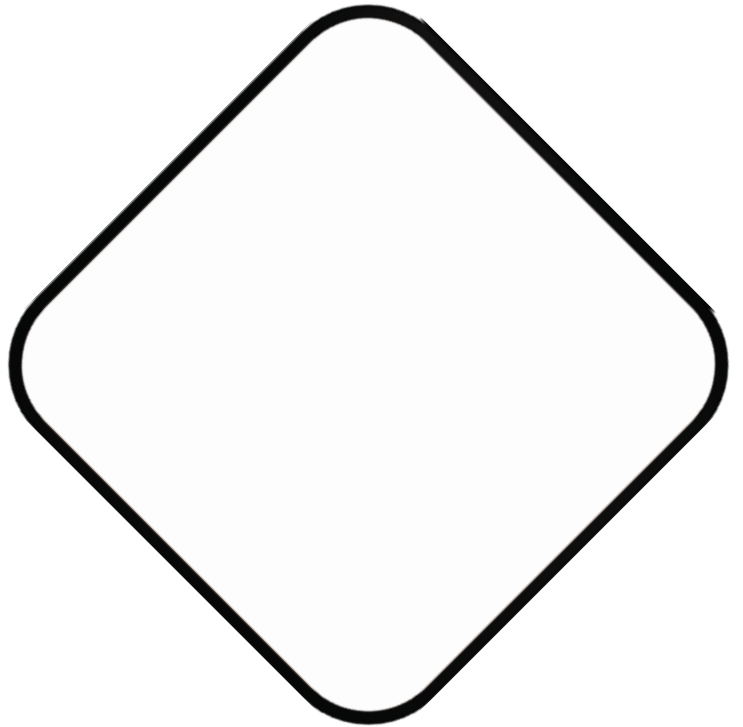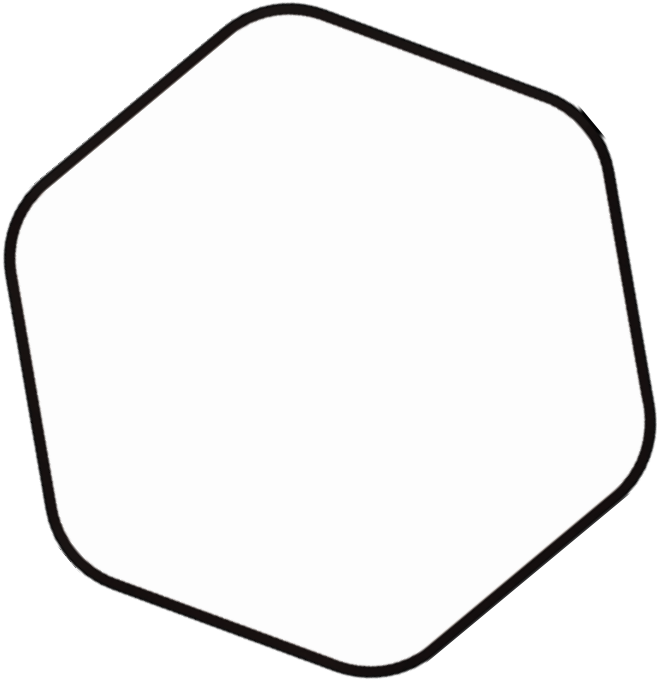



K-LITE

India's Lighting Company

D-10, Ambattur Industrial Estate, Chennai - 600 058.

T : 48591800, 48581950.

M: 95000 79797, 95000 85511

E : info@klite.in

W: www.klite.in

Unit II

23B,
SIDCO Industrial Estate,
Chennai - 600 098.

Unit V

Illumination Lab
G8, Ambattur Industrial Estate,
Chennai - 600 058.

K-LITE EUROPE LTD

T : 0208 012 8393

E : info@klite.co.uk

W : www.klite.co.uk

Unit III

179 & 180,
SIDCO Industrial Estate,
Chennai - 600 098.

Unit VI

22B,
SIDCO Industrial Estate,
Chennai - 600 098.

North London Showroom

271 Abbeydale Road,
Wembley, HA0 1TW.

Unit IV

Plot No.E29, E30, Industrial Area,
Phase-II, Mandideep Tehsil,
Goharganj District-462046.Raisen (MP).

Showroom

7/11, M.T.H. Road,
Chennai - 600 058.

Delhi Office - NCR

L-14/10, DLF City,
Phase - II, Gurgaon - 122002.
Haryana.