K-LiTE

Magudam Midi

"Magudam Midi" pathway luminaire, is an innovative design options to provide visual integration with the environment. Aesthetically designed sturdy construction ensures a long life against all weather condition, maintaining initial performances through the lifetime of the installation.

Product Description

- The luminaire comprises of specially contoured spun aluminium top cover with die cast aluminium components.
- Pressure diecast aluminium magudam attachment added for aesthetics.
- · Non-yellowing UV stabilised translucent acrylic diffuser.
- Suitable for mounting to internally threaded pipe of designation M30.
- · Cable entries for through-wiring of mains supply cable.
- Prewired with E27 holder and suitable for operating on 240V, 50Hz single phase ac supply.



Product Benefits

- · Elegant, Functionality
- · Quick installation and low assembly costs.
- Dark sky compliant protects pedestrians from glare, in addition to preventing spill light above the horizontal plane.

Area of Application


Illuminating parks, Gardens, commercial complex, Pathways in residential buildings, Walkways, Streetscapes & office complex.

Available Finish

Pure polyester powder coated

- · Graphite grey & Gold
- · Anthracite grey & Gold
- Jet black & Gold



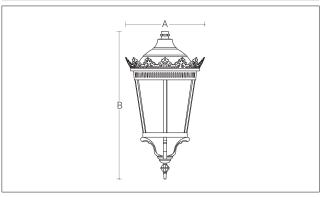

 ID
 Wattage
 A
 B

 4607
 E27 Holder
 358
 670

 Max. Wattage E27: 30W LED / 45W CFLE

K-LiTE

Magudam Midi

"Magudam Midi" pathway luminaire, is an innovative design options to provide visual integration with the environment. Aesthetically designed sturdy construction ensures a long life against all weather condition, maintaining initial performances through the lifetime of the installation. Product offered symmetrical light distribution.

Product Description

- The luminaire comprises of specially contoured spun aluminium top cover with die cast aluminium components.
- · Pressure diecast aluminium magudam attachment added for aesthetics.
- · Non-yellowing UV stabilised translucent acrylic diffuser.
- · Luminaire integrated with 30W LED.
- Suitable for mounting to internally threaded pipe of designation M30.
- · Cable entries for through-wiring of mains supply cable.
- Integral constant current power supply
- CRI (Ra): ≥80
- Prewired with LED driver and suitable for operating on 240V, 50Hz single phase ac supply.
- Ordering guide: KL-4608-CCT (Colour Temperature)
- Available CCT: 2700K, 3000K, 4000K, 5700K



Product Benefits

- · High luminous efficiency at reduced wattage.
- · Elegant, Functionality
- · Environmental Friendly
- The diffuser contributes to the creation of ambiance and to visual comfort by reducing glare.
- · Quick installation and low assembly costs.
- Dark sky compliant protects pedestrians from glare, in addition to preventing spill light above the horizontal plane.
- Sustainable LED technology offers durability and optimal light output with low power consumption.


Area of Application

Illuminating parks, Gardens, commercial complex, Pathways in residential buildings, Walkways, Streetscapes & office complex.

Available Finish

Pure polyester powder coated

- Graphite grey & Gold
- · Anthracite grey & Gold
- · Jet black & Gold

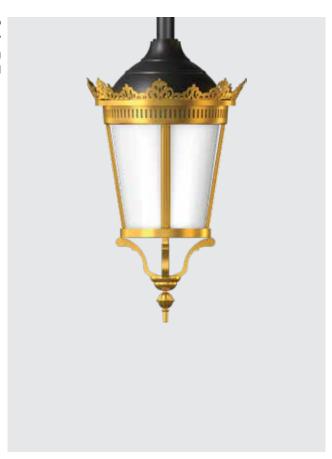

K-LiTE Magudam Midi





Technical Specifications General

ID System Wattage Driver Integral Input Voltage

: 4608 : 30W LED : Constant Current : 230-240Vac : 50-60Hz

Operating Voltage : 100-277Vac Operating Temperature :-15°C~+50°C

Physical

Frequency

Body : Spun aluminium top cover & Die cast aluminium Diffuser : Translucent Acrylic

Mounting : Suitable for mounting to internally threaded

pipe of designation M30

Finish : Powder coated

Graphite grey & Gold Jet black & Gold Anthracite grey & Gold Light Source

Light Source : BRIDGELUX :>80

CRI (Ra) LED Colour Temperature : 2700K / 3000K / 4000K

5700K

Driver

Power Supply : Integral Power Factor : >0.90 :<10% Surge Protection : 4KV : >85% Efficiency

Optical Performance

Light Distribution : Symmetrical













