K-LiTE

Jado 30 / Duo Jado 30

A decorative column light designed with single / double sided light output to provide soft, flat beam light distribution. These luminaries offer shielded glare free illumination on ground surface. Clean Lines and pure form are the underlying elements in this series of column light.

Product Description

- Luminaire body made of rectangular extruded aluminium tube (grade 6063) with die cast aluminium components and non corrosive SS fasteners.
- · Polycarbonate optical lens.
- MS mounting plate with an anchorage unit made out of hot dip galvanised steel for extra guarantee against corrosion.
- No Loop-in / Loop-out arrangement
- · Cable entries for through-wiring of mains supply cable.
- · Integral constant current power supply
- CRI (Ra): ≥80
- Prewired with LED driver and suitable for operating on 240V, 50Hz single phase ac supply.
- Ordering guide: KL-4561-CCT (Colour Temperature)
- Available CCT: 3000K, 4000K, 5700K











Product Benefits

- · High luminous efficiency at reduced wattage.
- · Elegant, Robust design
- Dark sky compliant protects pedestrians from glare by preventing spill light above the horizontal plane.
- Sustainable LED technology offers durability and optimal light output with low power consumption.

Area of Application

Suitable for Private & Public areas, Illuminating Driveways, Pathways, Building surrounds, Entrances, Squares & Gardens, Promenades.

Available Finish


Pure polyester powder coated RAL 9004 Signal black RAL 9007 Grey aluminium RAL 7016 Anthracite grey Graphite grey

Special Finish - On Request





Bamboo Teak

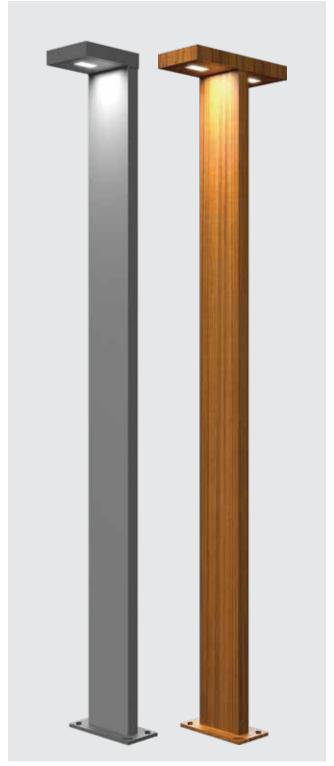





Technical Specifications

General

ID : 4561 / 4562 System Wattage : 1 x 30W / 2 x 30W LED Driver Integral : Constant Current

Driver Integral : Constant Curr Operating Voltage : 100-265Vac Operating Temperature :-15°C~+50°C

Physical

Body : Rectangular Extruded Aluminium Tube with

Die-Cast Aluminium

Diffuser : Polycarbonate Optical

Lens

Mounting : Floor - Surface Finish : Powder coated

RAL 9004 Signal black RAL 9007 Grey aluminium

RAL 7016 Anthracite grey

Graphite grey

Special Finish : Bamboo / Teak Texture

- On Request

Light Source

Light Source : NICHIA

CRI (Ra) : ≥70

LED Colour Temperature : 3000K / 4000K / 5700K

Driver

Power Supply : Integral Input Voltage : 230-240Vac Frequency : 50-60 Hz Power Factor :>0.95 THD :<10% Surge Protection : 4KV Efficiency :>85%


Optical Performance

Light Distribution : Type II, Asy

Base plate 300 x 150 x 12thk

4 Elongated holes 38 x 19 to suit M16 bolts at CC 250 x 100 Cable entry hole 190 x 40

-2 Nos. of M16 Nut -2 Nos. of Plain washer Note: No Loop-in / Loop-out arrangement

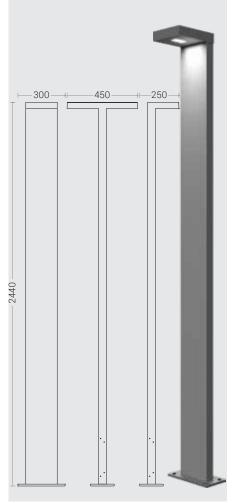

Note: It is our constant endeavor to upgrade the performance of our products. For the latest technical information, IES files and product updates please refer to the website at www.klite.in