

These environmental friendly sleek garden luminaires accentuate the garden architecture creating a pleasant and symmetrical light distribution. Bollard luminaires contribute to safety by illuminating pathways and other open spaces.

Product Description

- Luminaire body made of extruded aluminium alloy (grade 6063) with die cast aluminium components and non corrosive SS fasteners.
- For optimum coordination with lighting situation, these luminaries can be supplied in two different heights.
- Non yellowing UV stabilized translucent polycarbonate diffuser.
- Light emission 360 degree.
- Luminaire supplied with 2 core cable one metre length.
- Mounting plate die cast aluminium double powder coat with an anchorage unit and stainless steel fixing screws.
- Cable entries for through-wiring of mains supply cable.
- Prewired with E27 holder and suitable for operation on 240V, 50Hz single phase ac supply.



Product Benefits


- Elegant, Robust design
- Dark sky compliant protects pedestrians from glare by preventing spill light above the horizontal plane.
- Sturdy construction in order to maintain performance of the luminaire and to reduce maintenance costs.
- Quick & simple installation.

Area of Application

Suitable for low traffic areas.

Available Finish

- Pure polyester powder coated
- RAL 9004 Black
- RAL 9007 Grey aluminium
- RAL 7016 Anthracite grey
- Graphite grey

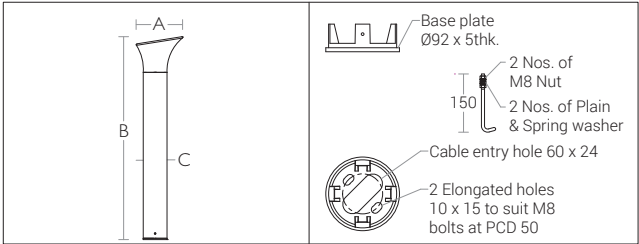

ID	Wattage	A	B	C
26963	E27	175	768	Ø90
26964	E27	175	500	Ø90

Max. Wattage : 11W LED / 20W CFLE