



CAST IRON & AREA LIGHTING POLES



Cast Iron Lighting Poles have become a permanent feature of modern architecture as they skillfully enhance the appearance of any surroundings giving its own unique Identity. Poles can stylishly convey the identity of any landscape. Our poles can be designed to suit single or multi arms brackets in order to install one or more light sources.

Product Description

- · Pole design parameters vary depending on the type of bracket and loading factor.
- · All pole sections are welded using special v groove technique by certified welders using high end MIG welding processes.
- · Cast Iron made of ASTM A48 Class 25
- The foundation bolt holes in the base plate are designed to be elongated for fine adjustments / alignment of the pole during installation.
- Base plate made of steel grade E250 & foundation bolt of grade 4.6
- (Conformity mark

Product Benefits

- · Quick installation and low assembly costs.
- · A wide range of Pole heights and bracket options to meet various lighting requirements.
- · Functionally versatile, strong and stable with sound engineering.
- · Innovative Design options to provide Visual integration with the environment.
- Customised for your delight: Creating the entire product portfolio Right from concept to completion, merging the best technology and practices in lighting.

Area of Application

Illuminating pathways in parks, Gardens, Resorts, Private driveways, Residential Area Lighting, Shopping centres, Building perimeters and Public places.

Installation

Surface mounted with base plate and fitted on a pre formed foundation.

Available Finish

Coated with zinc rich primer and finished using environmentally stable polyurethane based paint / Pure polyester powder coated of desired colour.

- · Graphite grey
- · Anthracite grey
- Black


K-LiTE

FORTUNA

Series

ID	Name	Arm	Height	Mounting
KP-4900	Fortuna Mini	-	1889	KP-76
KP-4901	Fortuna	-	2833	KP-76
KP-4902	Nene Fortuna	DA	3211	KP-76
KP-4903	Nene Fortuna	TA	3400	KP-76
KP-4904	Sora Fortuna	DA	3211	KP-76

Bracket Option : Sora / Sylvia / Nene / Emma

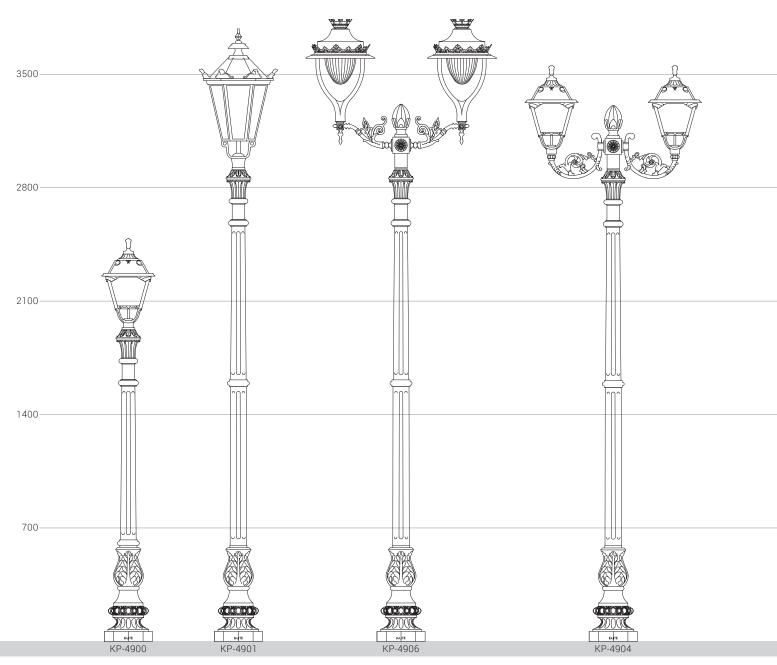

FORTUNA

K-LiTE

Series

ID	Name	Arm	Height	Mounting
KP-4905	Sora Fortuna	TA	3400	KP-76
KP-4906	Slyvia Fortuna	DA	3211	KP-76
KP-4907	Slyvia Fortuna	TA	3400	KP-76

Bracket Option : Sora / Sylvia / Nene / Emma

