K-LiTE



GARDEN LIGHTING POLES



Garden Lighting Pole is design to create a distinctive atmosphere in town & cities by using the most advanced technology to develop innovative lighting solutions. Poles can stylishly convey the identity of any landscape. Our poles can be designed to suit single or multi arms brackets in order to install one or more light sources.

Product Description

- Pole design parameters vary depending on the type of bracket and loading factor.
- · All pole sections are welded using special v groove technique by certified welders using high end MIG welding processes.
- · Built-in control box with cast aluminium service door and safety rope.
- Die cast aluminium door is contoured to the shape of the pole with silicone rubber gasket.
- The control gear tray is prewired with MCB, terminal connectors for loop-in / loop-out arrangement.
- The foundation bolt holes in the base plate are designed to be elongated for fine adjustments / alignment of the pole during installation.
- Base plate made of steel grade E250 & foundation bolt of grade 4.6
- (Conformity mark

Product Benefits

- · Quick installation and low assembly costs.
- A wide range of Pole heights and bracket options to meet various lighting requirements.
- · Functionally versatile, strong and stable with sound engineering.
- Long life span.
- Innovative Design options to provide Visual integration with the environment.
- Customised for your delight: Creating the entire product portfolio Right from concept to completion, merging the best technology and practices in lighting.

Area of Application

Illuminating pathways in parks, gardens, resorts, Private driveways, Residential Area Lighting, boulevards, shopping centres, building perimeters and public places.

Installation

Surface mounted with base plate and fitted on a pre formed foundation.

Available Finish


Coated with zinc rich primer and finished using environmentally stable polyurethane based paint / Pure polyester powder coated of desired colour.

- Graphite grey
- Anthracite grey
- Black

K-LiTE

Multiple Decorative Pole & Bracket Options



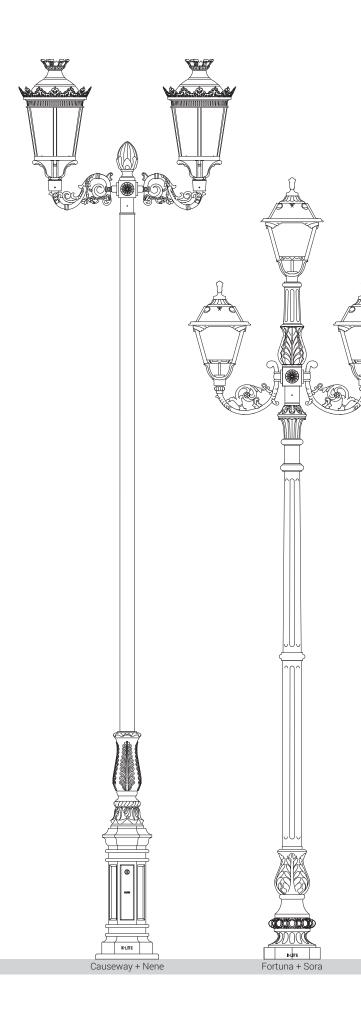



EMMA		
KP-4401	SA	475 x 450
KP-4402	DA	950 x 450



SORA		
KP-4382	SA	375 x 445
KP-4383	DA	750 x 445



SA	370 x 375
DA	740 x 375



NENE			
KP-4380	SA	380 x 375	
KP-4381	DA	760 x 375	

Brackets suitable for Ø60, Ø76 & Ø88.9 OD pipe.