

"Magudam Midi" pathway luminaire, is an innovative design options to provide visual integration with the environment. Aesthetically designed sturdy construction ensures a long life against all weather condition, maintaining initial performances through the lifetime of the installation.

Product Description

- The luminaire comprises of specially contoured spun aluminium top cover with die cast aluminium components.
- Pressure diecast aluminium magudam attachment added for aesthetics.
- Non-yellowing UV stabilised translucent acrylic diffuser.
- Suitable for mounting to internally threaded pipe of designation M30.
- Cable entries for through-wiring of mains supply cable.
- Prewired with E27 holder and suitable for operating on 240V, 50Hz single phase ac supply.



Product Benefits

- Elegant, Functionality
- Quick installation and low assembly costs.
- Dark sky compliant protects pedestrians from glare, in addition to preventing spill light above the horizontal plane.



Area of Application

Illuminating parks, Gardens, commercial complex, Pathways in residential buildings, Walkways, Streetscapes & office complex.

Available Finish

Pure polyester powder coated

- Graphite grey & Gold
- Anthracite grey & Gold
- Jet black & Gold

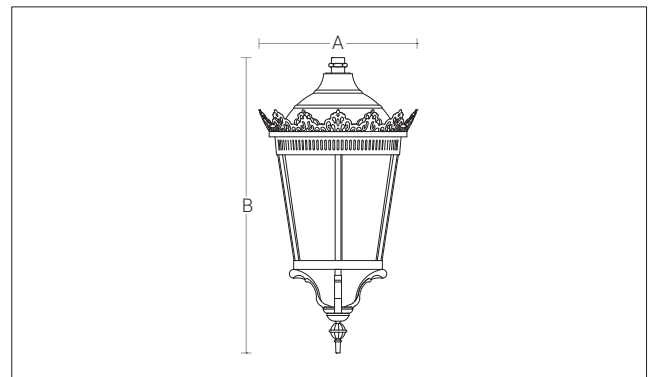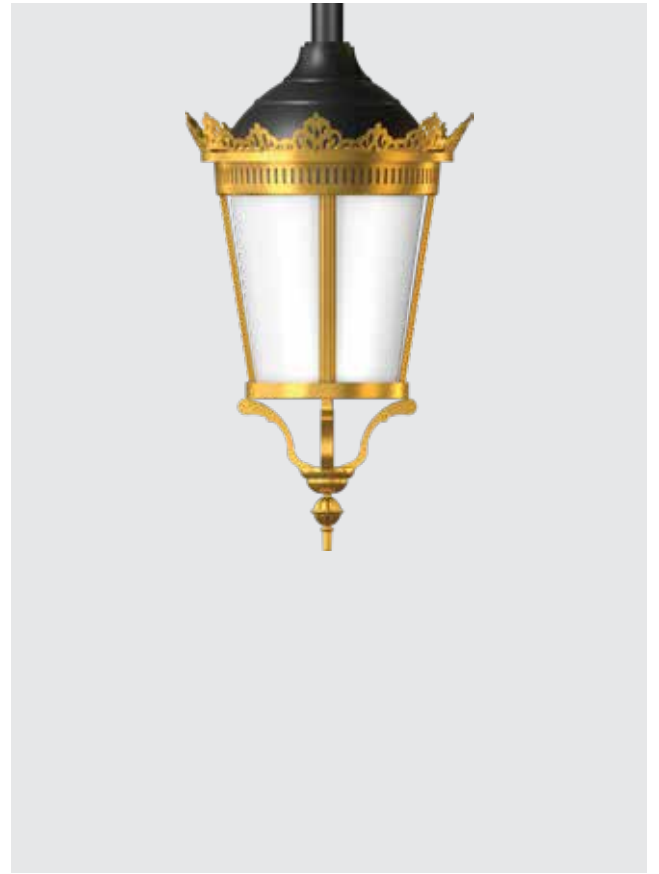

ID	Wattage	A	B
4607	E27 Holder	358	670

Max. Wattage E27 : 30W LED / 45W CFLE