

Imperial Mini pathway luminaires is a special purpose outdoor luminaire, integral model, totally weather proof aesthetically contoured. Improved long lasting protection against ingress of dust / moisture / insects inside optical compartment with top opening facility for maintenance.

Product Description

- Luminaire comprises of specially contoured spun aluminium body featuring high strength and anti corrosion.
- Aluminium Casting crown attachment added for aesthetics.
- Non yellowing, UV stabilised, translucent V acrylic diffuser, Clear V acrylic diffuser / Clear V PC diffuser
- EPDM gasket.
- Suitable for mounting to internally threaded pipe of designation M30.
- Cable entries for through-wiring of mains supply cable.
- Prewired with E27 holder and suitable for operation on 240V, 50Hz single phase ac supply.



Product Benefits

- Top cover opening facility for easy maintenance.
- Functionally versatile, strong and stable.
- Corrosion resistant and easy maintenance.
- Quick installation and low assembly costs.

Area of Application

Gardens, Smaller Roadways, Private driveways, Residential Area Lighting, Courtyards, Public area lighting like parks & Squares

Available Finish

Pure polyester powder coated

- Graphite grey
- Anthracite grey
- Jet black



Diffuser Options



A8 - Translucent Acrylic

A9 - Clear Acrylic

A12 - Clear Polycarbonate

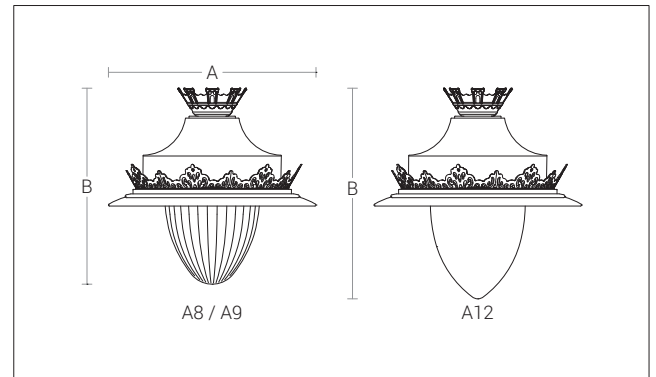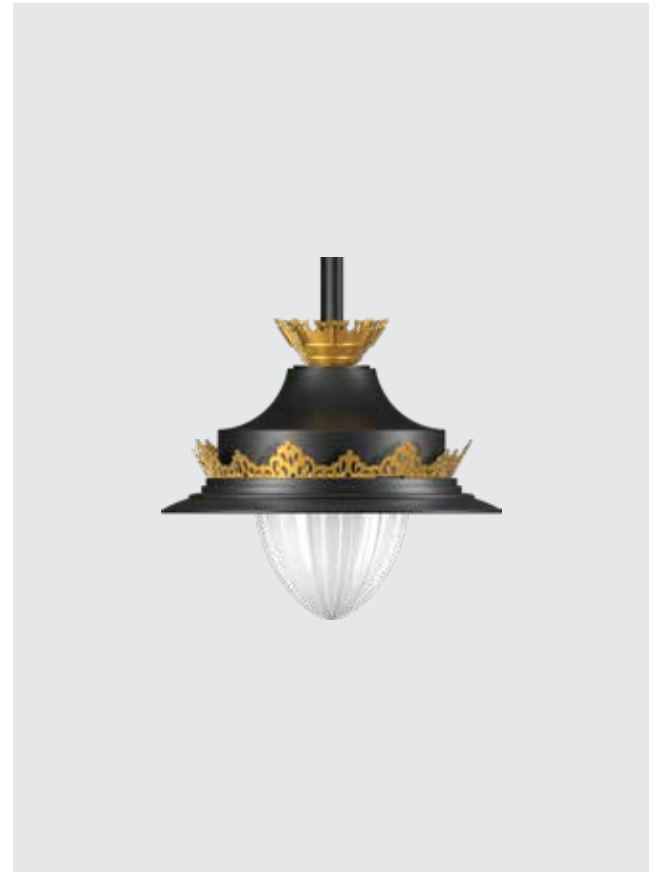

ID	Wattage	A	B
4890 A8/A9/A12	E27	Ø425	401 / 431

Note : A8-V Diffuser Translucent / A9-V Diffuser Clear / A12-V Diffuser Clear (polycarbonate)