K-LiTE

### Pelican Fort Mini

Pelican Fort Mini pathway luminaires is a special purpose outdoor luminaire, integral model, totally weather proof aesthetically contoured. Improved long lasting protection against ingress of dust / moisture / insects inside optical compartment with top opening facility for maintenance.

## **Product Description**

- Luminaire comprises of specially contoured spun aluminium body featuring high strength and anti corrosion.
- Non yellowing, UV stabilised, translucent V acrylic diffuser, Clear V acrylic diffuser / Clear V PC diffuser
- · EPDM gasket.
- Suitable for mounting to internally threaded pipe of designation M30.
- · Cable entries for through-wiring of mains supply cable.
- Prewired with E27 holder and suitable for operation on 240V, 50Hz single phase ac supply.



#### **Product Benefits**

- Top cover opening facility for easy maintenance.
- Functionally versatile, strong and stable.
- · Corrosion resistant and easy maintanance.
- · Quick installation and low assembly costs.

#### Area of Application


Gardens, Smaller Roadways, Private driveways, Residential Area Lighting, Courtyards, Public area lighting like parks & Squares

#### Available Finish

Pure polyester powder coated


- Graphite grey
- · Anthracite grey
- Jet black

# **Diffuser Options**



A12 - Clear Polycarbonate



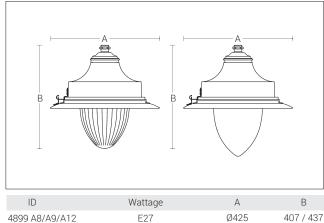

Note: A8-V Diffuser Translucent / A9-V Diffuser Clear / A12-V Diffuser Clear (polycarbonate)