

A modern heritage post top luminaire. Aesthetically designed sturdy construction ensures a long life against all weather condition, maintaining initial performances through the lifetime of the installation.

**Product Description**

- The luminaire comprises of specially contoured spun aluminium top cover, gravity die cast aluminium supporting arms with mounting base.
- Non yellowing UV stabilised V translucent acrylic / V clear acrylic diffuser.
- Suitable for mounting on 38mm OD pipe.
- Cable entries for through-wiring of mains supply cable
- Prewired with E27 holder and suitable for operation on 240V, 50Hz single phase ac supply.



**Product Benefits**

- Elegance, Functionality.
- Corrosion resistant and easy maintenance.
- Quick installation and low assembly costs.
- Dark sky compliant protects pedestrians from glare, in addition to preventing spill light above the horizontal plane.

**Area of Application**


Illuminating parks, Gardens, Commercial complex, Residential roadways, Walkways, Streetscapes & office complex.

**Available Finish**

Pure polyester powder coated


- Graphite grey
- Anthracite grey
- Jet black

**Diffuser Options**

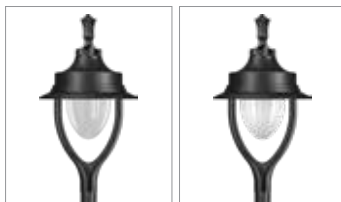

A9 - Clear Acrylic

A8 - Translucent acrylic

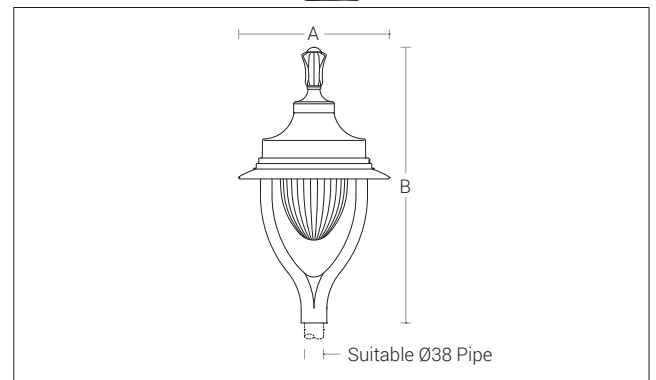

ID	Wattage	A	B
5189 A8/A9	E27	Ø300	550