

These environmental friendly sleek garden luminaires accentuate the garden architecture creating a pleasant and symmetrical light distribution. Bollard luminaires contribute to safety by illuminating pathways and other open spaces.

### Product Description

- Luminaire body made of extruded aluminium alloy (grade 6063) with die cast aluminium components and non corrosive SS fasteners.
- For optimum coordination with lighting situation, these luminaries can be supplied in three different heights.
- Non yellowing UV stabilized polycarbonate translucent diffuser.
- Light emission 360 degree.
- Silicone gasket
- Luminaire supplied with 2 core cable one metre length.
- Mounting plate die cast aluminium double powder coat with an anchorage unit and stainless steel fixing screws.
- Cable entries for through-wiring of mains supply cable.
- Prewired with E27 holder and suitable for operation on 240V, 50Hz single phase ac supply.



### Product Benefits



- Elegant, Robust design
- Sturdy construction in order to maintain performance of the luminaire and to reduce maintenance costs.
- Quick & simple installation.

### Area of Application

Suitable for low public areas.

### Available Finish

- Pure polyester powder coated
- RAL 9004 Signal black
- RAL 9007 Grey aluminium
- RAL 7016 Anthracite grey
- Graphite grey

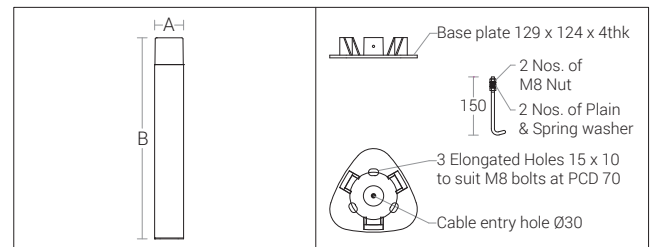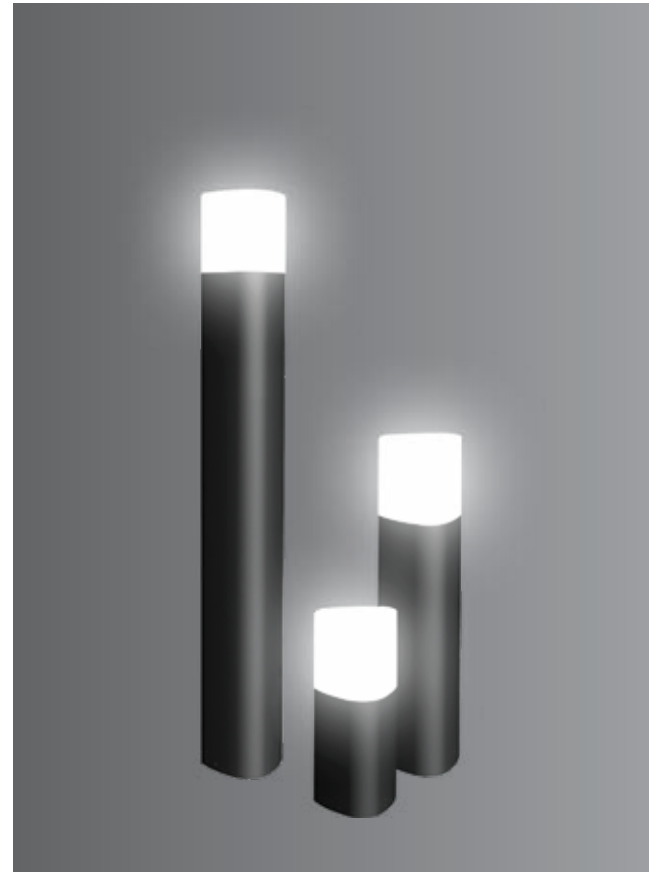

| ID   | Holder | A     | B   |
|------|--------|-------|-----|
| 6955 | E27    | △ 130 | 900 |
| 6956 | E27    | △ 130 | 500 |
| 6957 | E27    | △ 130 | 300 |

Max. Wattage : 11W LED / 20W CFLE